



GSM/GPRS/GPS Tracker **GL300** **Manage Tool User Guide**

TRACGL300MT003

Revision: 1.03



<http://www.queclink.com>
sales@queclink.com

Document Title	GL300 Manage Tool User Guide
Version	1.03
Date	2015-03-03
Status	Release
Document Control ID	TRACGL300MT003

General Notes

Queclink offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Queclink. The information provided is based upon requirements specifically provided to Queclink by the customers. Queclink has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Queclink within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

Copyright

This document contains proprietary technical information which is the property of Queclink Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

Copyright © Queclink Wireless Solutions Co., Ltd. 2015

Contents

Contents	2
1. Revision history	4
2. GL300 Manage Tool Interface.....	5
2.1. System Requirements	5
2.2. COM Setting	6
2.3. Quick Setting Wizard	6
2.4. Professional Setting Windows.....	7
2.4.1 Title Bar.....	7
2.4.2 Menus	7
2.4.3 Toolbar.....	10
2.4.4 Status Bar.....	11
2.4.5 Command Browser and Command Operation Space	11
2.5. Operation Result Interface	13
2.5.1 Operation Successfully Interface.....	13
2.5.2 Operation Failed Interface	13
3. Operation Instruction	15
3.1. Device Configuration with Quick Setting Wizard.....	15
3.1.1 Welcome to Quick Setting Wizard.....	15
3.1.2 GPRS Network Setting.....	16
3.1.3 Main Server Setting.....	16
3.1.4 Fixed Time Report Setting.....	17
3.1.5 Send Command to Device	18
3.2. Device Configuration in Professional Setting Mode.....	19
3.2.1 Set the parameters of Bearer Setting Information	19
3.2.2 Set the parameters of Backend Server Register Information.....	20
3.2.3 Set the parameters of Quick Start Setting.....	21
3.2.4 Set the parameters of Global Configuration	22
3.2.5 Set the parameters of Auto-Unlock PIN	24
3.2.6 Set the parameters of Protocol Watchdog.....	25
3.2.7 Set the parameters of Time Adjustment.....	26
3.2.8 Set the parameters of Non Movement Detection.....	27
3.2.9 Set the parameters of Function Key Setting	28
3.2.10 Set the parameters of Outside Working Hours	29
3.2.11 Set the parameters of Preserve special device logical state	30
3.2.12 Set the parameters of Fixed Report Information	31
3.2.13 Set the parameters of Geo-Fence Information.....	33
3.2.14 Set the parameters of Speed Alarm.....	34
3.2.15 Set the parameters of Jamming Detection	35
3.2.16 Set the parameters of Temperature Alarm	36
3.2.17 Set the parameters of Digital Input Port Setting.....	37
3.2.18 Set the parameters of Real Time Operation.....	38

3.2.19 Set the parameters of Transparent Data Transmission.....	39
3.2.20 Set the parameters of White Call List Configuration	40
3.2.21 Set the parameters of Google link SMS Configuration	41
3.2.22 Set the parameters of Network Select.....	42
3.2.23 Set the parameters of Store Command String.....	43
3.2.24 Set the parameters of User Defined Function.....	44
3.2.25 Set the parameters of Update configuration over the air	45
3.3. Read/Save All Configuration.....	46
3.4. Load/Execute All Configuration	47

1. Revision history

Revision	Date	Author	Description of change
V1.00	2013-4-18	Rayna	Initial
V1.01	2014-8-26	Vega	Add description of GTPDS, GTJDC, GTCMD, GTUDEF, GTUPC Delete description of GTMON
V1.02	2014-10-28	Kateri	Instruction of the Manage Tool V1.6 which apply to software version GL300R00A06V04M128_NMX
V1.03	2015-03-03	Kateri	Instruction of the Manage Tool V1.8 which apply to software version GL300R00A08V02M128_EON

2. GL300 Manage Tool Interface

GL300 manage tool is PC software which can be used to configure GL300 through Data_Cable_M. It is easy for the backend server developers to configure GL300 with manage tool, which has friendly user interface. The correct command messages sent to GL300 will be displayed on the manage tool. (These messages can also be sent by SMS or GPRS).

The administrators can also use the manage tool to configure GL300 before selling. But it is strongly recommended to establish a backend server and implement the way to control GL300 by SMS or GPRS. Please refer to “*GL300 @Track Air Interface Protocol*” for detail.

Before using the manage tools please find “PL2303_Prolific_DriverInstaller_v1417.zip” in develop suit and install the driver for PL2303. After that a new COM port can be found in the PC system, and then please follow the steps as below:

1. Power on GL300.
2. Connect GL300 to PC with Data_Cable_M.
3. Run “**Queclink GL300_Manage_Tool_Vx.xx.exe**”.

2.1. System Requirements


In order for this manage tool to run on your computer, you must use it in below operating system:

- ◆ Windows 98SE;
- ◆ Windows ME Windows 2000 SP4;
- ◆ Windows XP SP2 and above (32 & 64 bit);
- ◆ Windows Server 2003 (32 & 64 bit);
- ◆ Windows Server 2008 (32 & 64 bit);
- ◆ Windows Vista (32 & 64 bit);
- ◆ Windows 7 (32 & 64 bit);

Supported System Environments:

- ◆ Microsoft .NET Framework 2.0 or higher

2.2. COM Setting

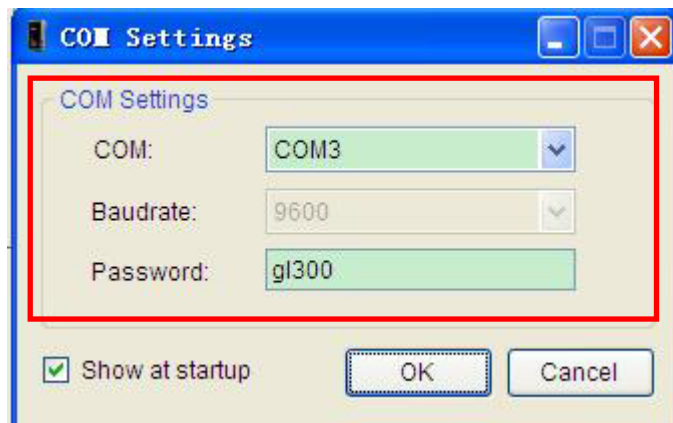


Select the COM port, input the password “gl300”, and the main window will display.

2.3. Quick Setting Wizard


The quick setting wizard gives a basic setting for device. If you want use more functions of GL300, please change to enter professional setting mode.

Before you enter quick setting wizard, you must make sure the COM connection is OK.

Please refer chapter 3.1 for the detail of setting with quick setting wizard.

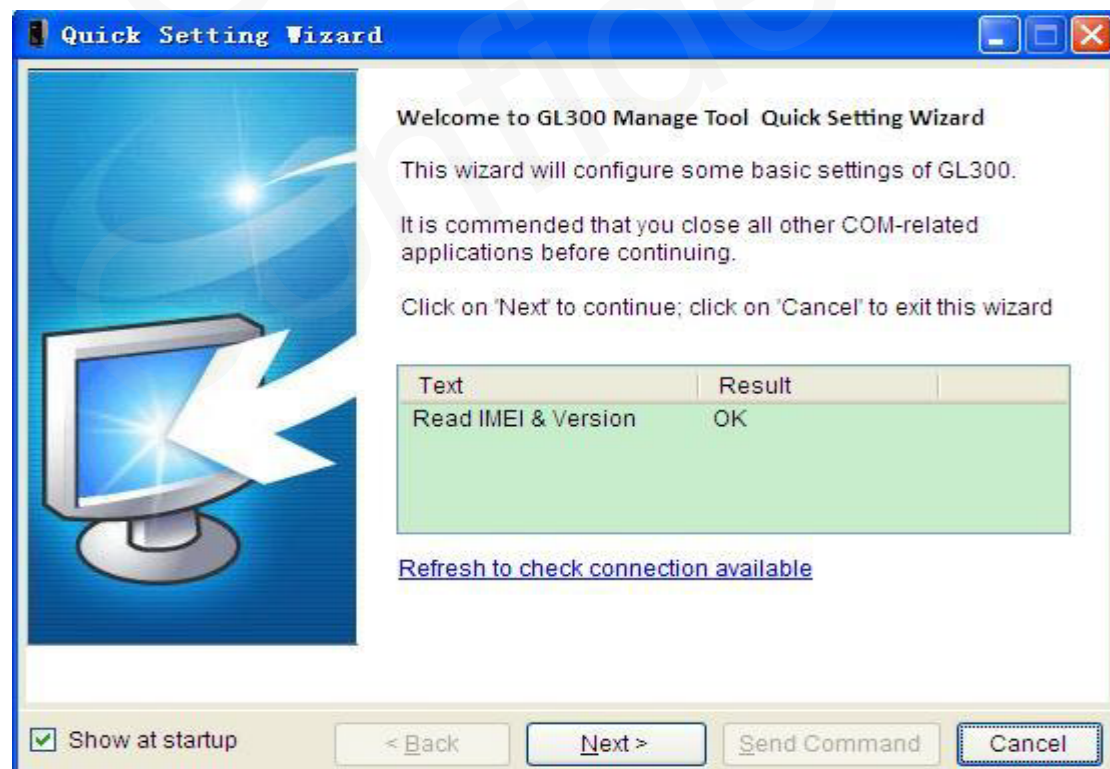

2.4. Professional Setting Windows

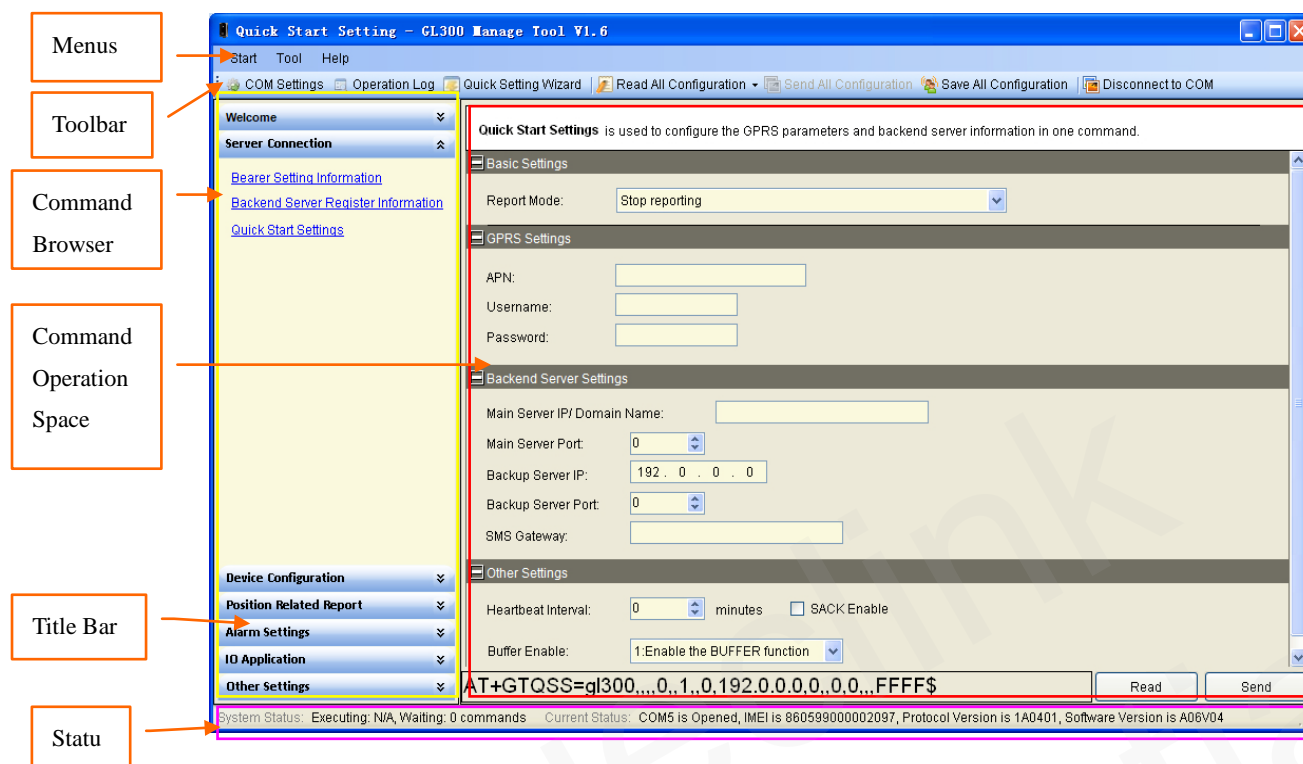

2.4.1 Title Bar

Title Bar indicates current operational command title.

2.4.2 Menus

It include “Start”, “Tool”, “Help” menu in menus.



2.4.2.1 Start Menu

Start menu include “COM Settings”.


[COM Setting]: It is used to set the COM information and password Setting details, please refer to chapter 2.2

2.4.2.2 Tool Menu

Tool menu include “Quick Setting Wizard”, ”Operation Log”, “Options” setting.


[Quick Setting Wizard]: It is used to open quick setting wizard directly. Please refer to chapter 3.1 for details.

[Operation Log]: It is used to display/hidden the operation log.

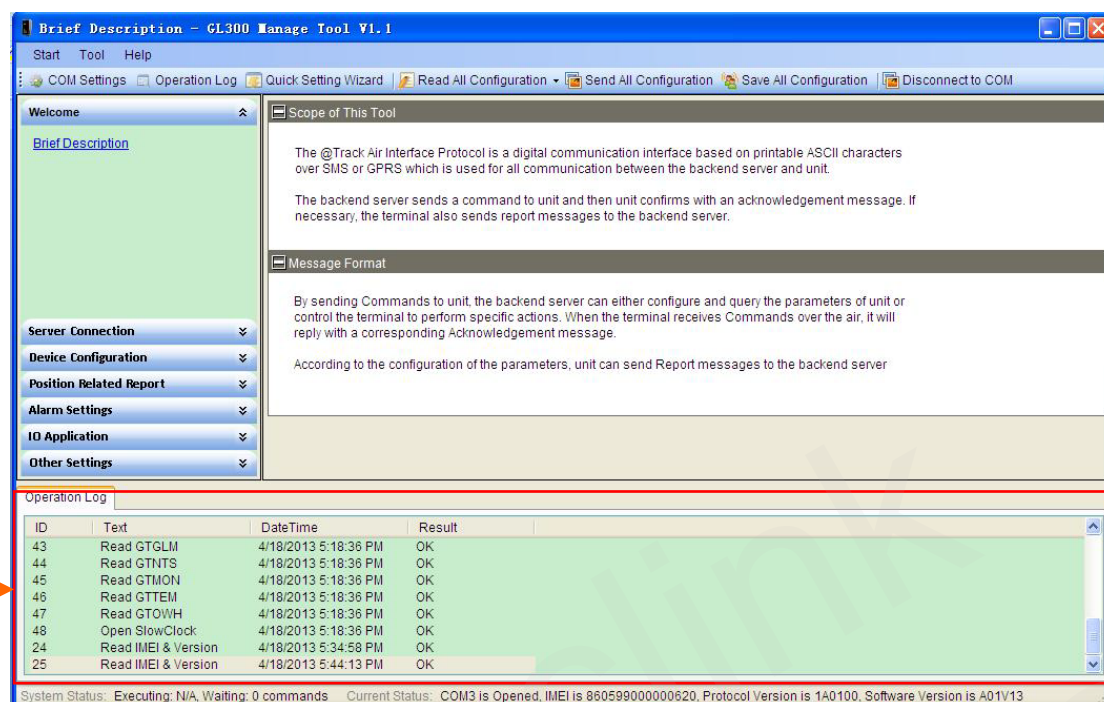


[Options]: It is used to set the basic setting of manage tool.

“Basic Options” include startup setting options and log save option.

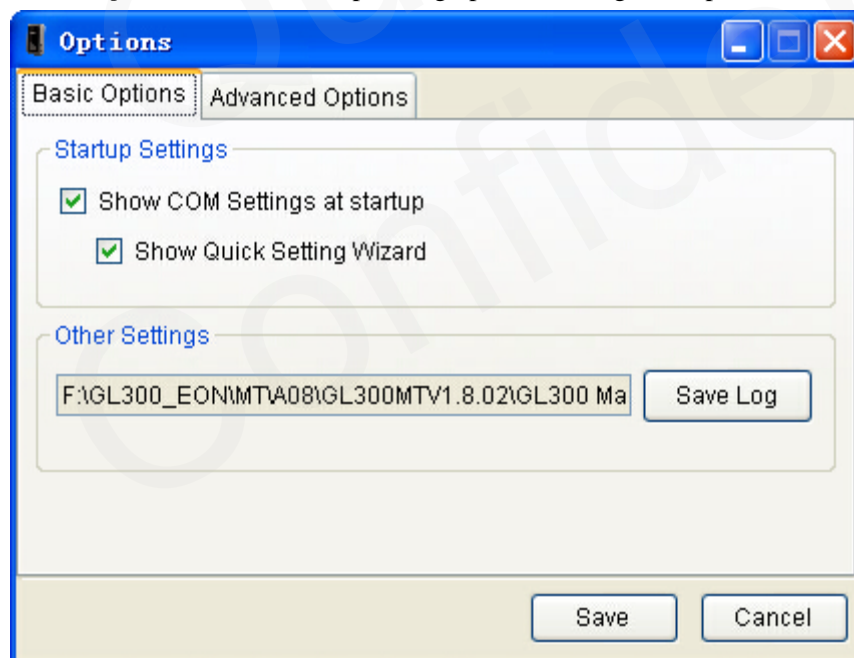

“Advanced Options” include COM settings and other settings.

COM Settings is used to set enable/disable slowclock control. It is recommended using default setting for these settings.

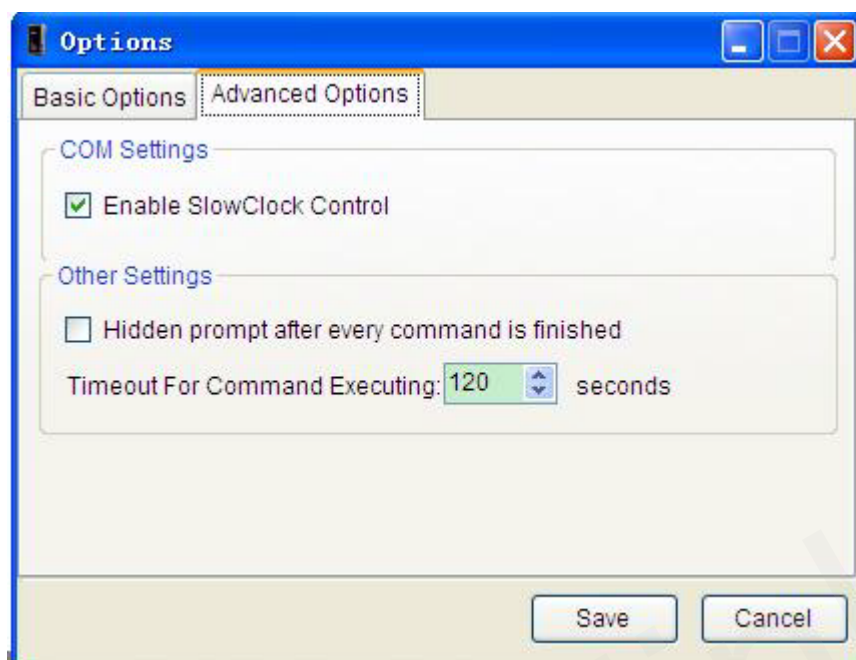

2.4.2.3 Help Menu

Help menu include “About” and “Diagnosis”.

[**About**]: Select “About”. Then the following pop up window will display.



“Tool Version” indicates the version of this manage tool.

“Support Version” indicates the firmware which this manage tool used for.

“Unit Version” indicates the firmware which connects to the PC. It is recommended using the same version of support version. If it is different between support version and device version, the new character of device can not be used in this tool.

[**Diagnosis**]: Select “Diagnosis”. Then the following pop up window will display.



This function is only for technology diagnosis when the device report data abnormally, please ignore it when it works normally.

2.4.3 Toolbar

It include “COM Setting”, “Operation Log”, “Quick Setting Wizard”, “Real All Configuration”, “Execute All Configuration”, “Save All Configuration”, “Connect/Disconnect to COM”.




[COM Setting]: It is used to set the COM information and password. Setting details please refer to chapter 2.2.

[Operation Log]: It is used to display/hidden operation log.

[Quick Setting Wizard]: It is used to open quick setting wizard directly. Please refer to chapter 3.1 for details.

[Read All Configuration]: It is used to display/hidden operation log.

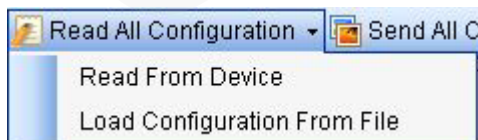

“Read From Device”: It is used to read all configuration from device which connects to PC.

“Load Configuration From File”: It is used to load configuration file to the manage tool.

[Send All Configuration]: It is used to execute all configurations in Command Operation Space except GTRTO.

[Save All Configuration]: It is used to save all configurations in Command Operation Space to file.

[Connect/Disconnect to COM]: It is used to Connect/Disconnect to COM manually.

2.4.4 Status Bar

System Status: Executing: N/A, Waiting: 0 commands Current Status: COM3 is Opened, IMEI is 860599000000620, Protocol Version is 1A0100, Software Version is A01V12

There is system status and current status in status bar.

[System Status]: It indicates the count of commands which are waiting and executing to set.

[Current Status]: It indicates current COM status, IMEI, protocol version and software version which read from device.

2.4.5 Command Browser and Command Operation Space

This area is mainly read and set parameters of device


2.4.5.1 Command Brower

Command Brower separates all @track protocol command to several parts. Click Function in command Brower, reference parameters of this command will be shown in command operation space.

Command Brower	Function Description	Relative Command
Server Connection	Bearer Setting Information	GTBSI
	Backend Server Register Information	GTSRI
	Quick Start Settings	GTQSS
Device Configuration	Global Configuration	GTCFG
	Auto-Unlock PIN	GTPIN
	Software Protocol Watchdog	GTDOG
	Time Adjustment	GTTMA
	Non Movement Detection	GTNMD
	Function Key Setting	GTFKS
	Outside Working Hours	GTOWH
	Preserve special device logical state	GTPDS
Position Related Report	Fixed Position Report	GTFRI
Alarm Setting	Geo-Fence Configuration	GTGEO
	Speed Alarm	GTSPD
	Jamming Detection	GTJDC
	Temperature Alarm	GTTEM
IO Application	Digital Input Settings	GTDIS

Other Settings	Real Time Operation	GTRTO
	Transparent Data Transmission	GTDTA
	White Call List Configuration	GTWLT
	Google Link SMS Configuration	GTGLM
	Network Select	GTNTS
	Store Command String	GTCMD
	User Defined Function	GTUDF
	Update configuration over the air	GTUPC

2.4.5.2 Command Operation Space

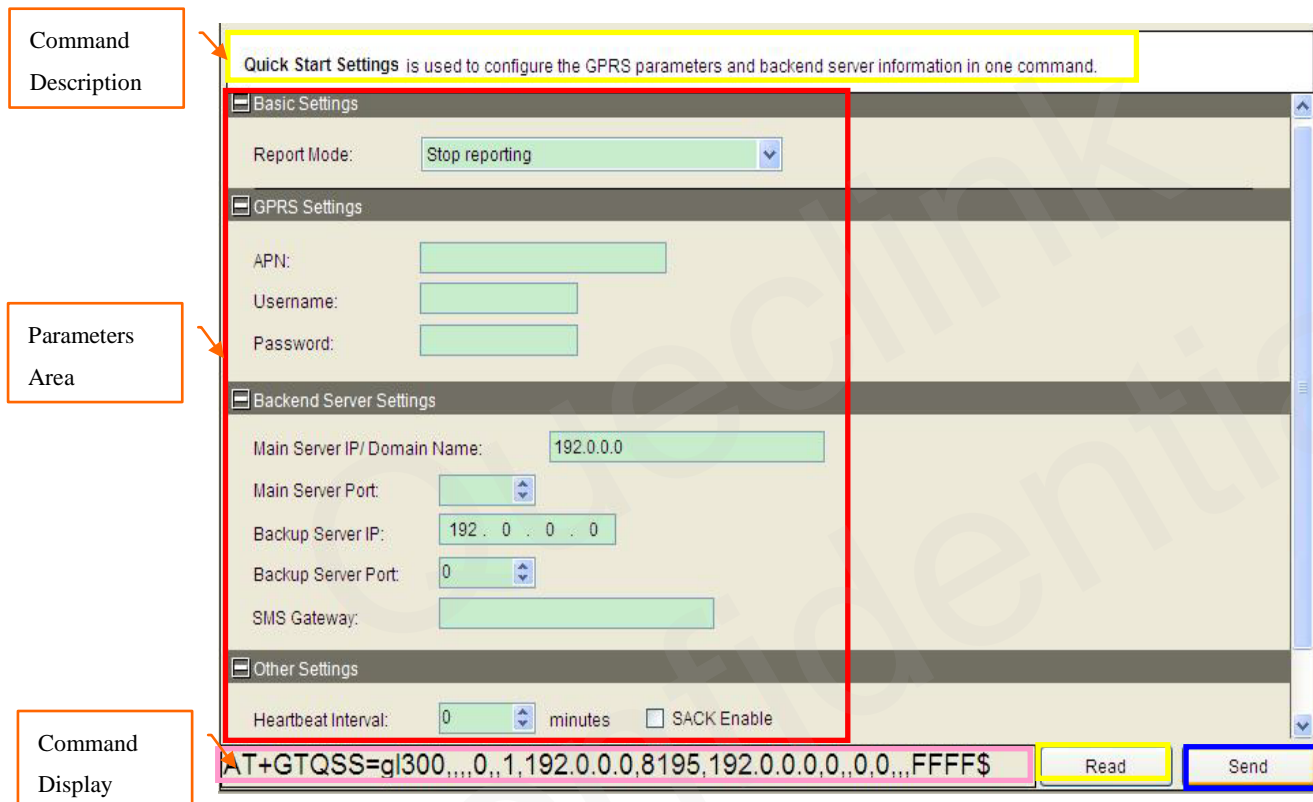

Command Description

Quick Start Settings is used to configure the GPRS parameters and backend server information in one command.

Parameters Area

Basic Settings

Report Mode: Stop reporting

GPRS Settings

APN:

Username:

Password:

Backend Server Settings

Main Server IP/Domain Name: 192.0.0.0

Main Server Port:

Backup Server IP: 192.0.0.0

Backup Server Port: 0

SMS Gateway:

Other Settings

Heartbeat Interval: 0 minutes ☐ SACK Enable

Command Display

AT+GTQSS=g|300,,,0,,1,192.0.0.0,8195,192.0.0.0,0,,0,0,,,FFFF\$

Read Send

[Command Description]: There is a short description for reference command.

[Parameters Area]: Set/Read parameters of this command in this area.

[Command Display]: Command with parameters in parameters area display in this area.

[Read]: Click this button to read this command from device.

[Send]: Click this button to send this command to device.


2.5. Operation Result Interface

2.5.1 Operation Successfully Interface

Command read OK.




Command send OK.

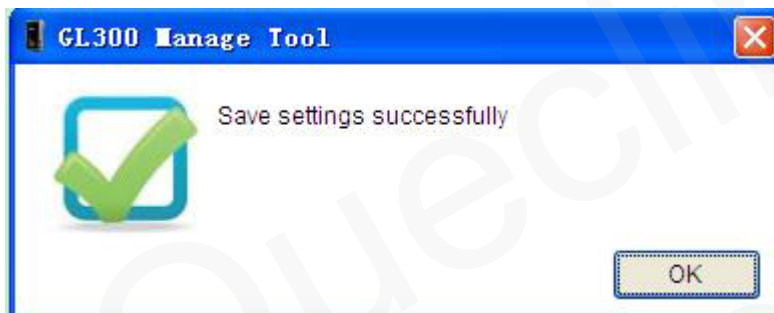

2.5.2 Operation Failed Interface


There should be COM port connection problem if the fail reason is timeout.

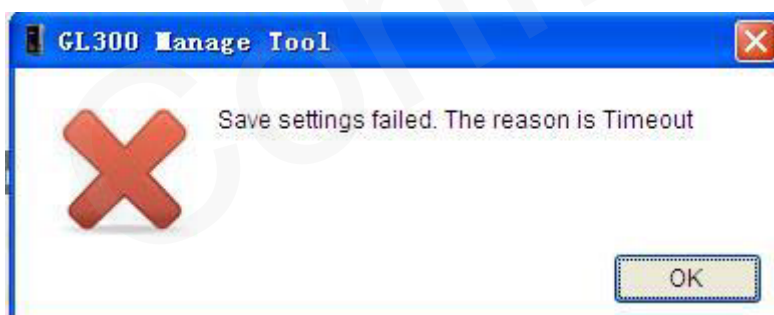


There should be COM port is occupied. Please close all other COM-related applications.



Please change to correct device password if Password Error.

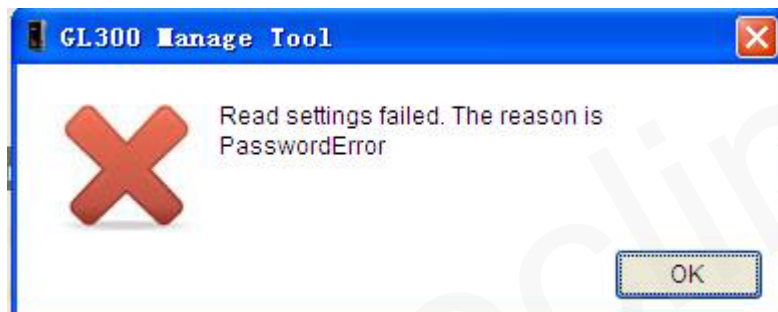

There are some issues with this com, please check your com wire or port.

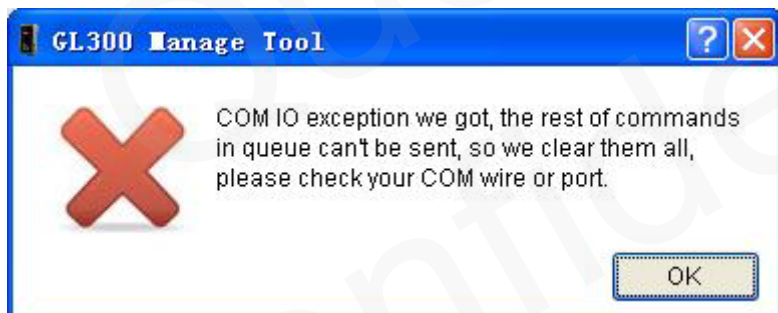

3. Operation Instruction


3.1. Device Configuration with Quick Setting Wizard

The manage tool is developed based on the @Track Air Interface Protocol. Please refer to “GL300 @Track Air Interface Protocol” for detail.

The quick setting wizard gives a basic setting for device. If you want use more functions of GL300, please change to professional setting mode.

3.1.1 Welcome to Quick Setting Wizard

Click “Quick Setting Wizard” in toolbar, open quick setting wizard. If the “Result” in this window is OK, click “Next”. If the “Result” is not OK, please check the COM port connection till the result is OK.

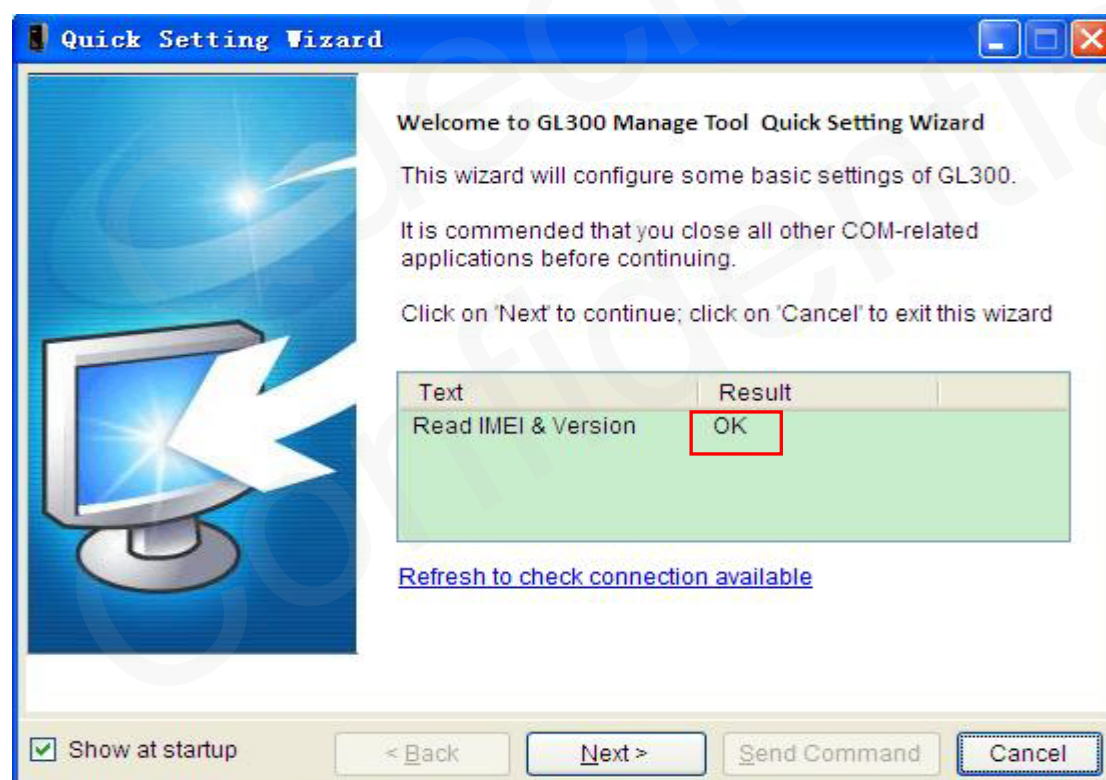


Welcome to Quick Setting Wizard

3.1.2 GPRS Network Setting

Step_1: Set APN, APN user name and password in this window. The meaning of these parameters, please refer to the “GL300 @Track Air Interface Protocol” for detail.

Step_2: Then click “Next”.

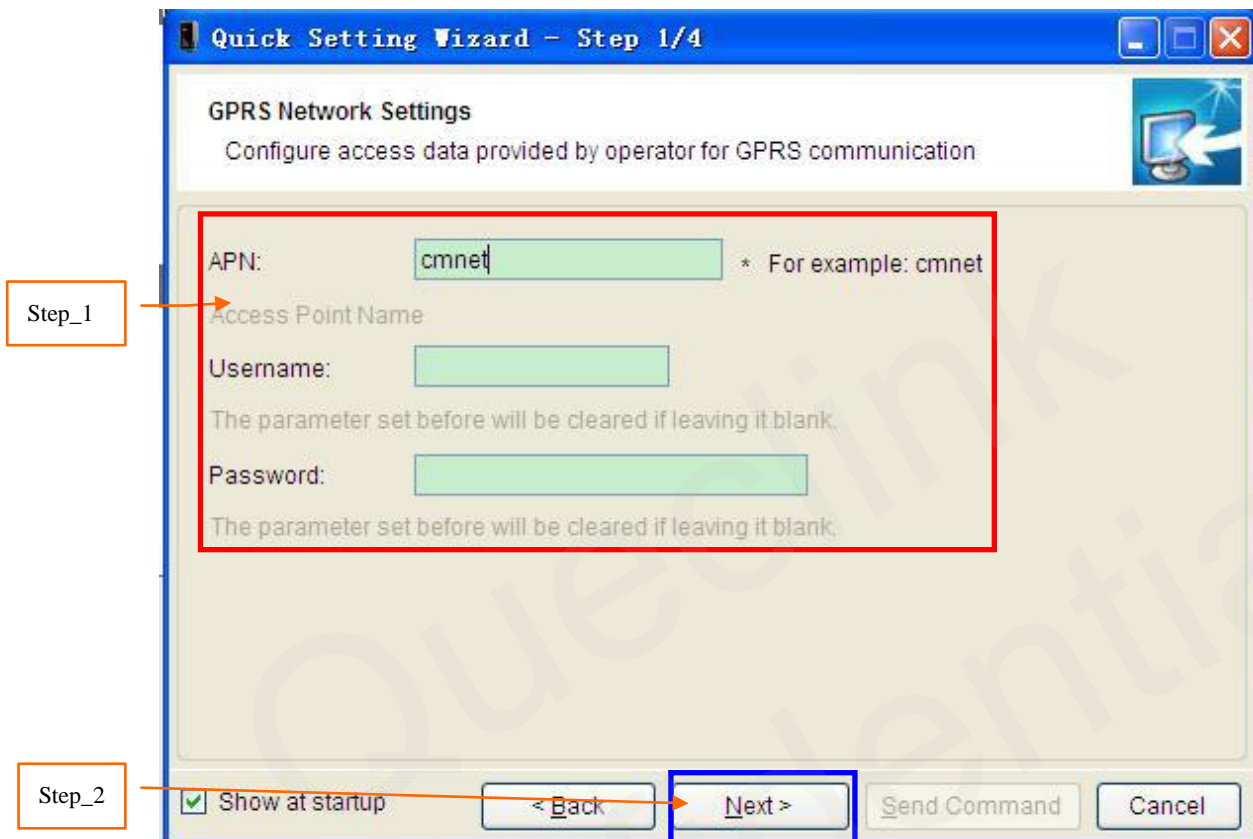


3.1.3 Main Server Setting

Step_1: Set report mode, main server, main server port, and SMS gateway in this window. The meaning of these parameters, please refer to the “GL300 @Track Air Interface Protocol” for detail.

Step_2: Click “Check if main backend server is available” to check if main server IP and port is valid in network. If the result is ERROR, please check the server connection. You can not get report from server if the server connection has problem.

Step_3: Click “Next”.

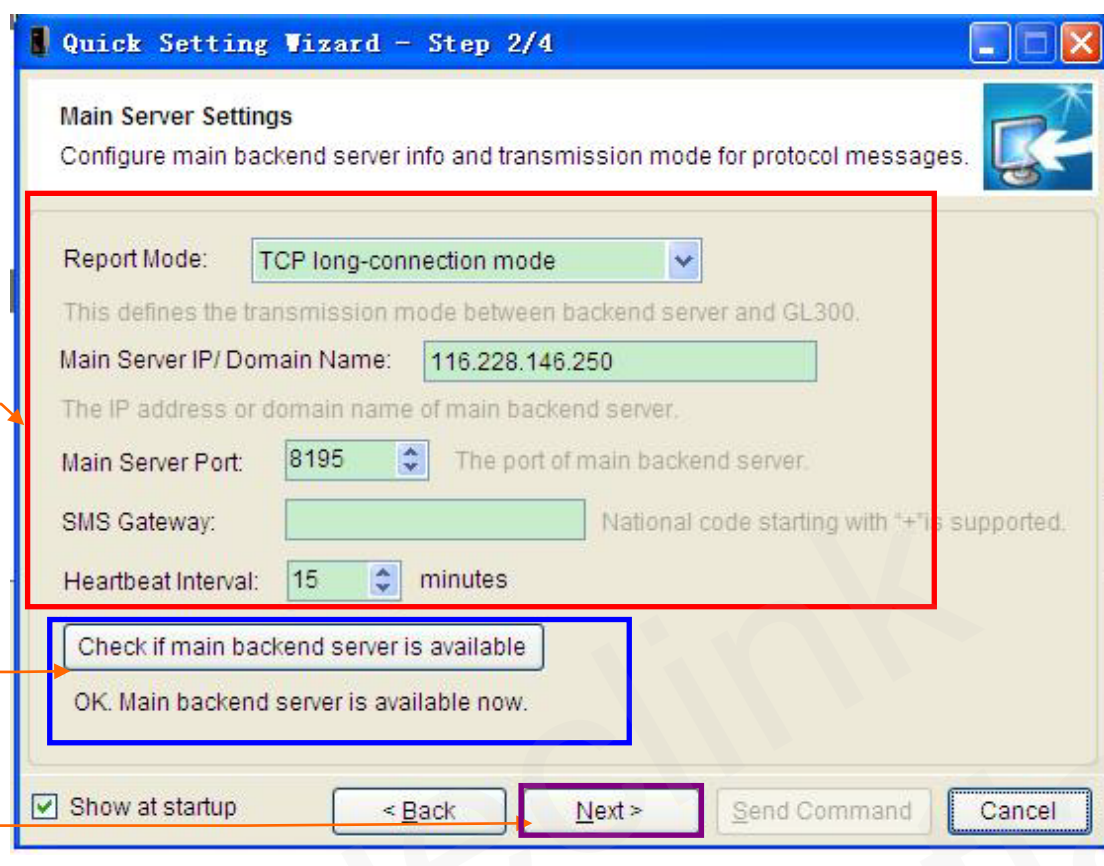

Quick Setting Wizard - Step 2/4

Main Server Settings
Configure main backend server info and transmission mode for protocol messages.

Report Mode: **TCP long-connection mode**
This defines the transmission mode between backend server and GL300.

Main Server IP/ Domain Name: **116.228.146.250**
The IP address or domain name of main backend server.

Main Server Port: **8195** The port of main backend server.

SMS Gateway: National code starting with "+" is supported.

Heartbeat Interval: **15** minutes


Check if main backend server is available
OK. Main backend server is available now.

☒ Show at startup < Back **Next >** Send Command Cancel

3.1.4 Fixed Time Report Setting

Step_1: Set check interval, send interval, discard no fix in this window. The meaning of these parameters, please refer to the “GL300 @Trak Air Interface Protocol” for detail.

Step_2: Click “Next”.

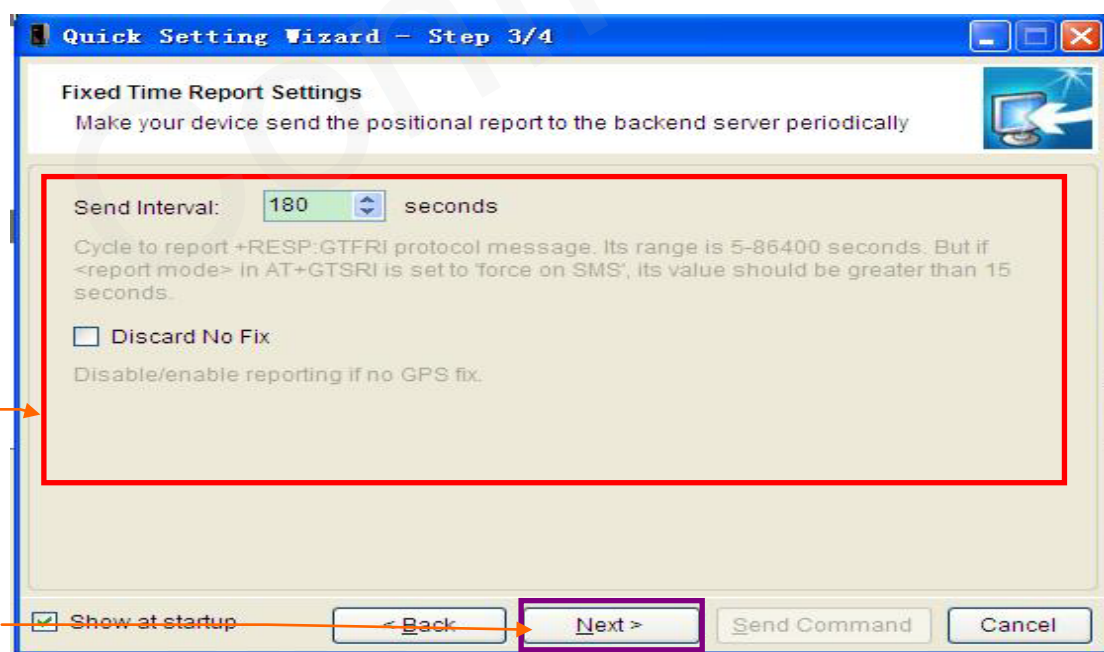

Quick Setting Wizard - Step 3/4

Fixed Time Report Settings
Make your device send the positional report to the backend server periodically

Send Interval: **180** seconds
Cycle to report +RESP:GTFRI protocol message. Its range is 5-86400 seconds. But if <report mode> in AT+GTSRI is set to 'force on SMS', its value should be greater than 15 seconds.


☐ Discard No Fix
Disable/enable reporting if no GPS fix.

☒ Show at startup < Back **Next >** Send Command Cancel

3.1.5 Send Command to Device

Step_1: Click “Send Command”. Command *GTBSI*, *GTSRI*, and *GTFRI* will send to device.

Step_2: If the settings download successfully, the result return OK. Click “OK” to exit the quick setting wizard.

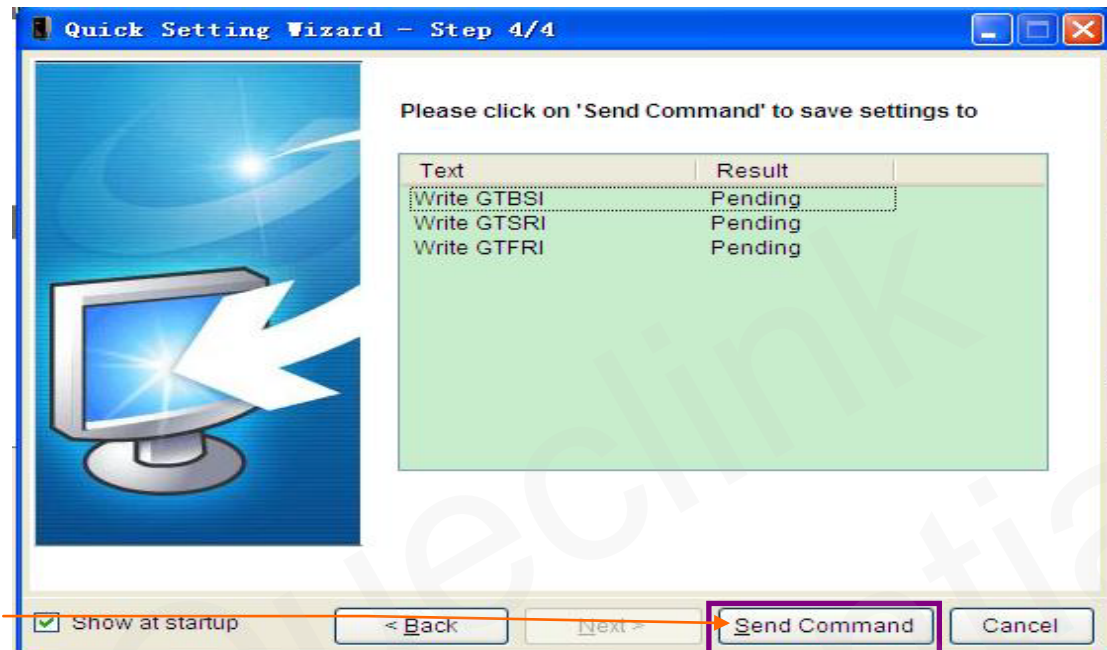


3.2. Device Configuration in Professional Setting Mode

The manage tool is developed based on the @Track Air Interface Protocol. Please refer to “GL300 @Track Air Interface Protocol” for detail.

Following is a general procedure to configure GL300 with manage tool.

3.2.1 Set the parameters of Bearer Setting Information

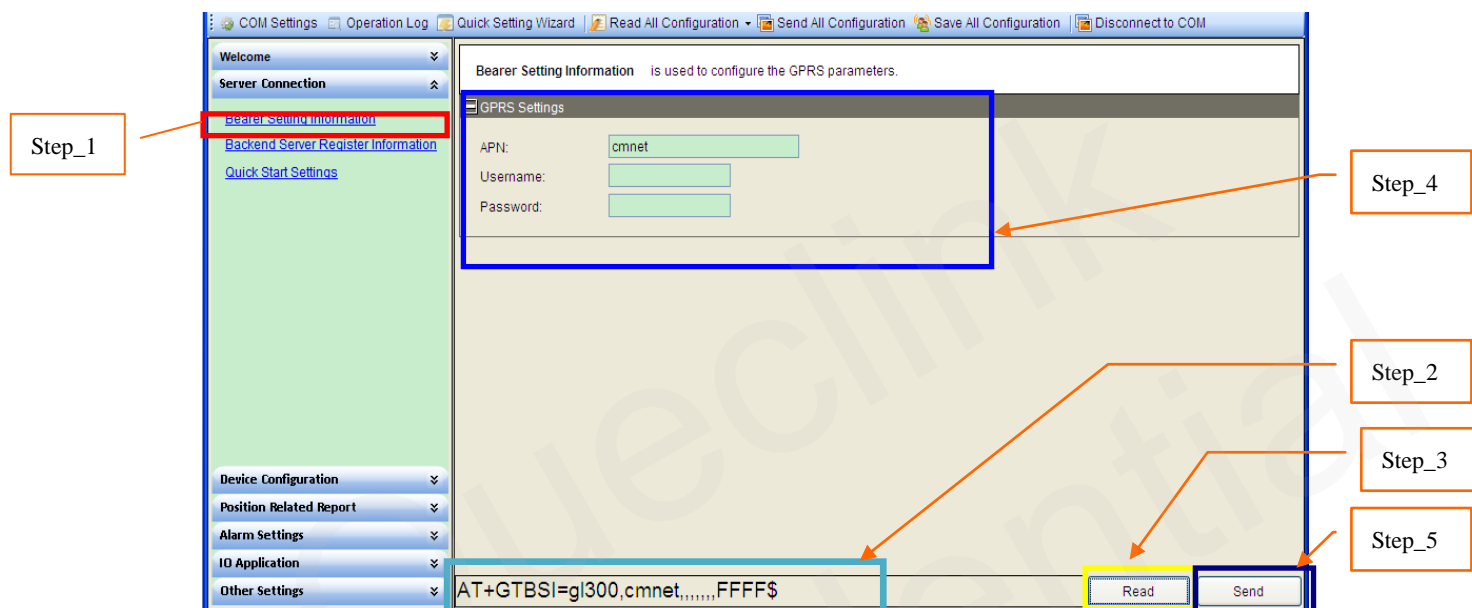

Step_1: Select “*Bearer Setting Information*”, after that the parameters of GTBSI show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set APN parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTBSI to GL300.

3.2.2 Set the parameters of Backend Server Register Information

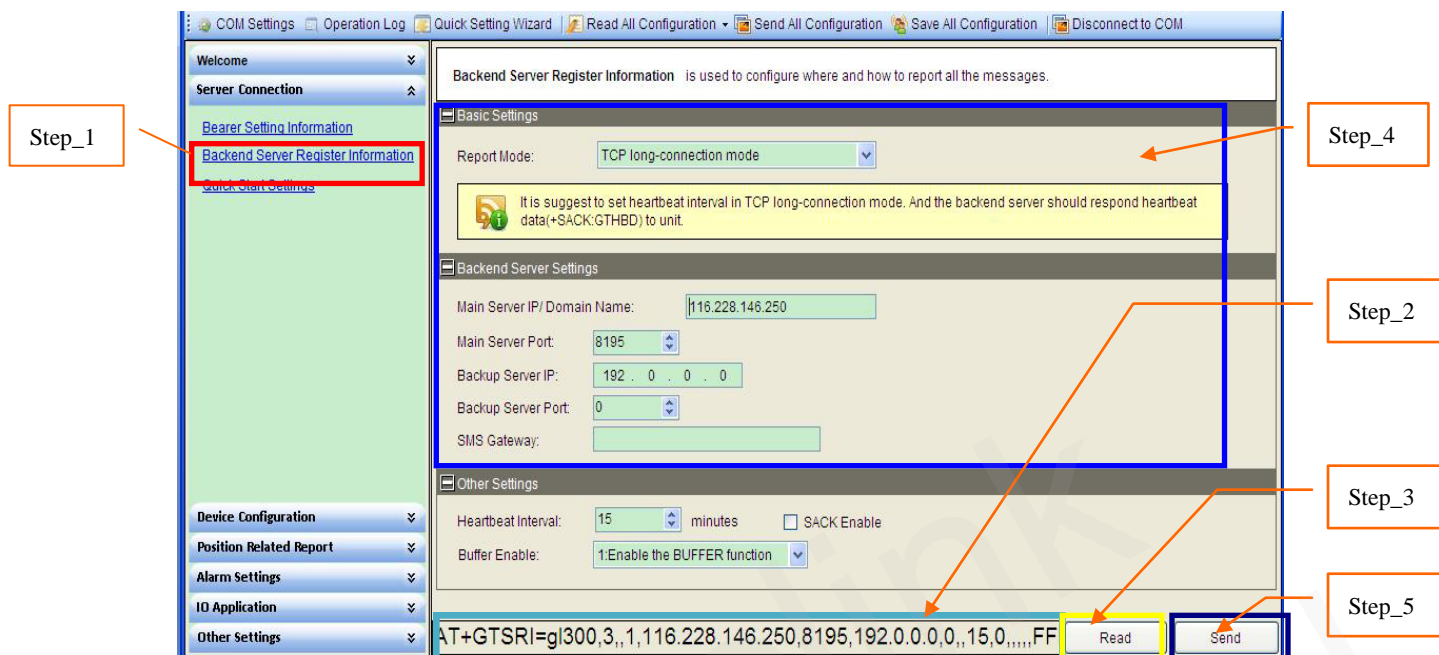

Step_1: Select “Backend Server Register Information”, after that the parameters of GTSRI show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set backend server information parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTSRI to GL300.

3.2.3 Set the parameters of Quick Start Setting

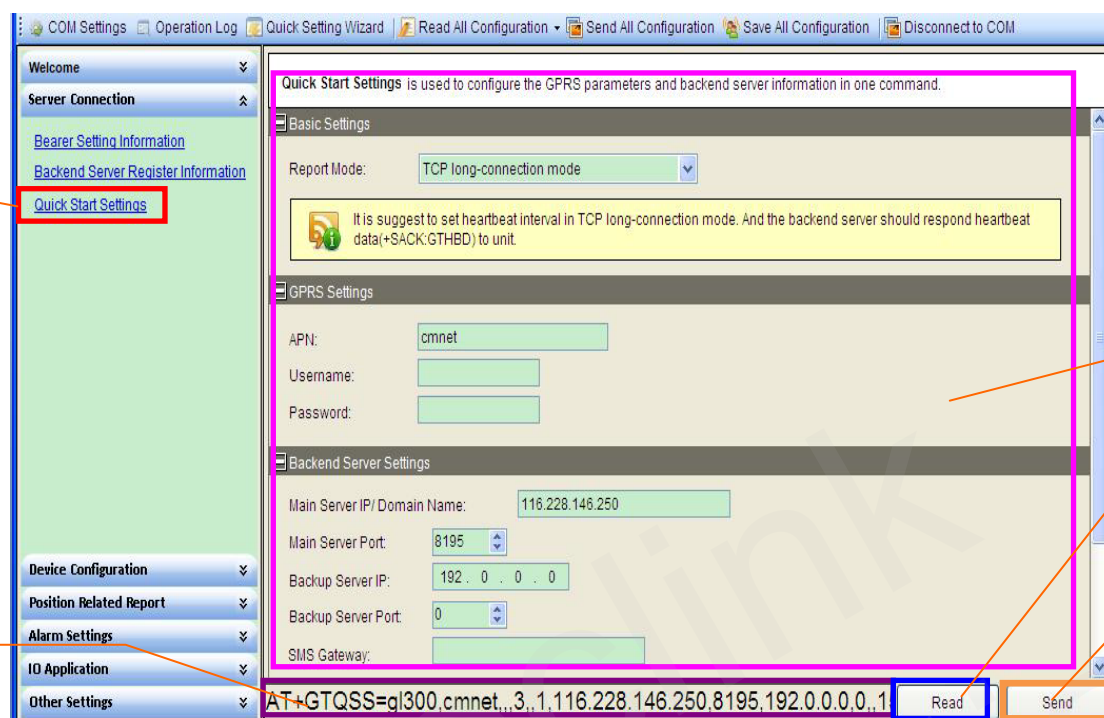

Step_1: Select “Quick Start Settings”, after that the parameters of GTQSS show in Command Operation Space.



Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the GPRS and backend server information parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTQSS to GL300.

3.2.4 Set the parameters of Global Configuration

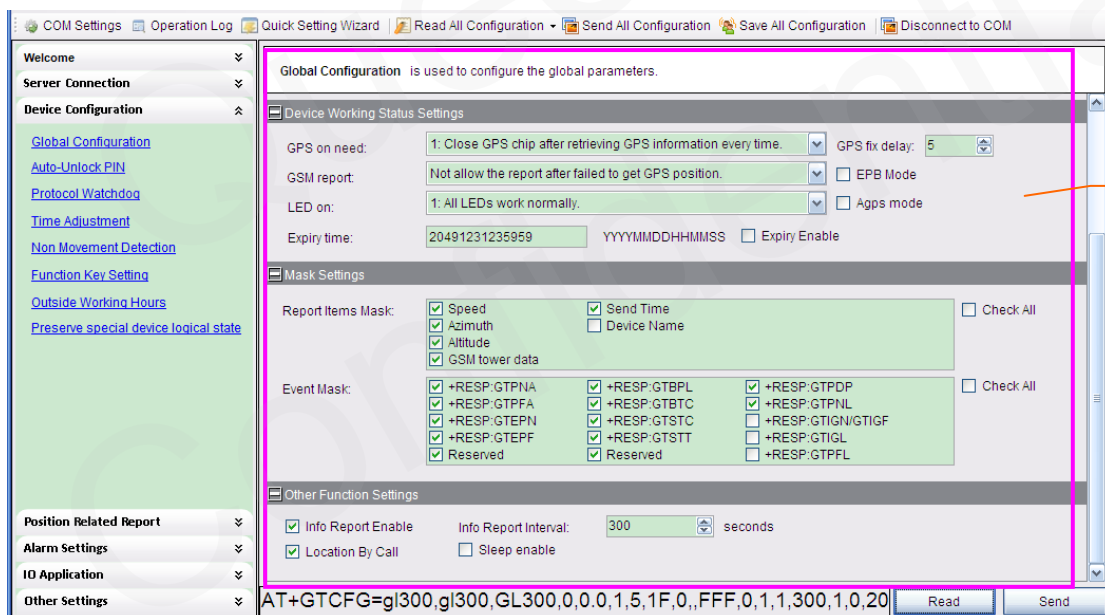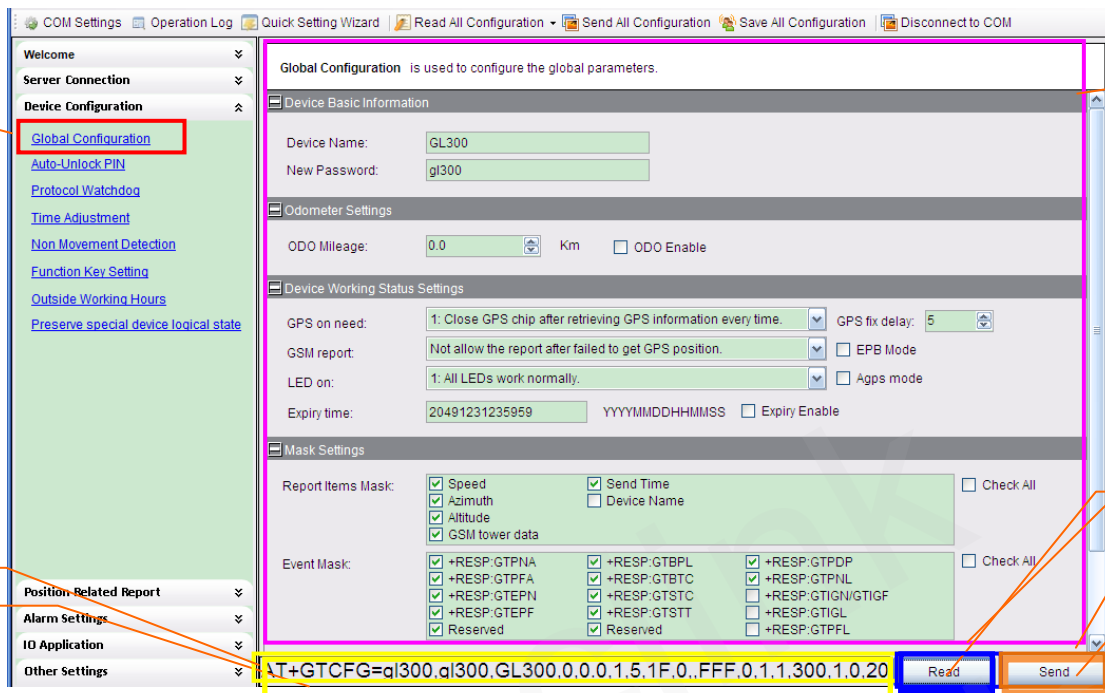

Step_1: Select “Global Configuration”, after that the parameters of GTCFG show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the global parameters. Please refer to “*GL300 @Track Air Interface Protocol*” for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTCFG to GL300.

3.2.5 Set the parameters of Auto-Unlock PIN

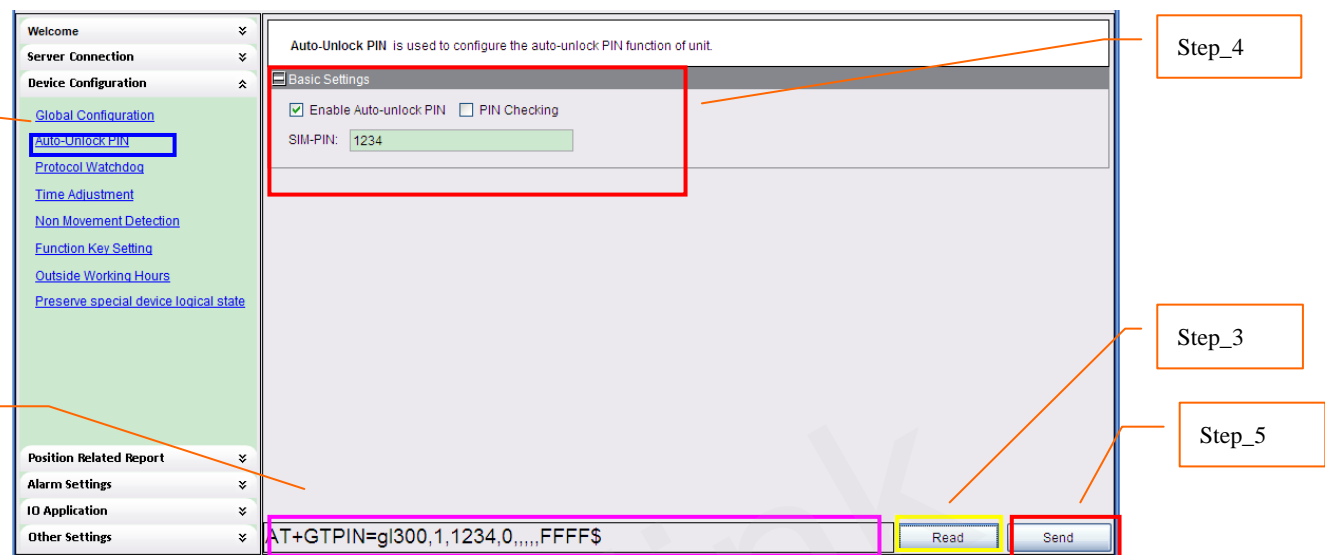

Step_1: Select "Auto-Unlock-PIN", after that the parameters of GTPIN show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the auto-unlock PIN parameters. Please refer to "GL300 @Track Air Interface Protocol" for the meaning of each parameter.

Step_5: Click the "Send" button; download the parameters of GTPIN to GL300.

3.2.6 Set the parameters of Protocol Watchdog

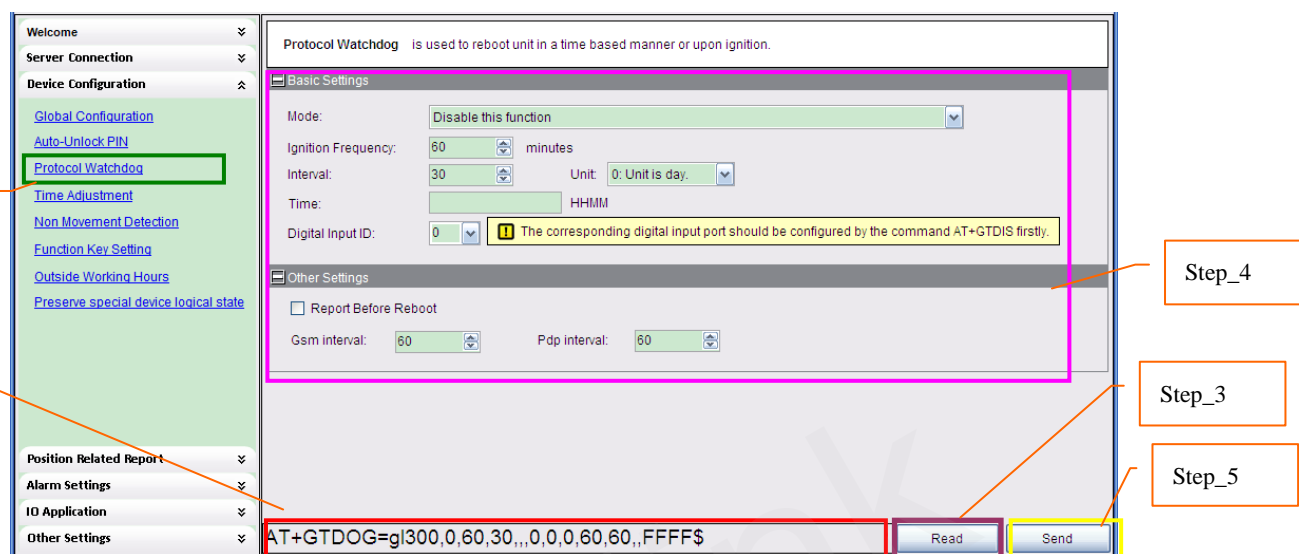

Step_1: Select “Protocol Watchdog”, after that the parameters of GTDOG show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the Protocol Watchdog parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTDOG to GL300.

3.2.7 Set the parameters of Time Adjustment

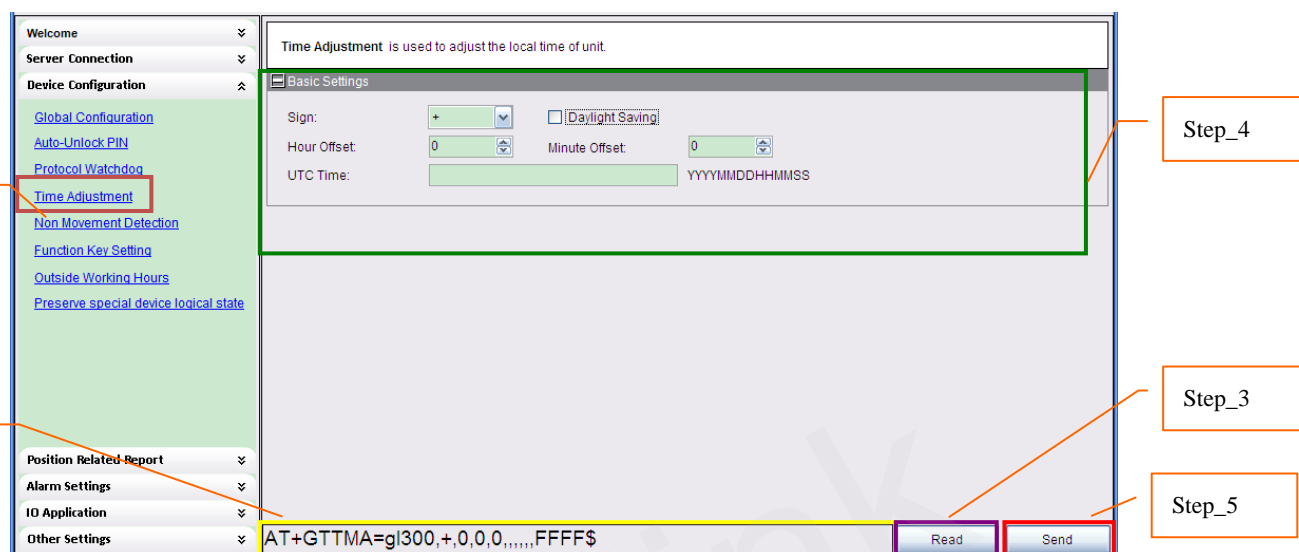

Time Adjustment is used to adjust the local time of unit.

Basic Settings

Sign: ☐ Daylight Saving

Hour Offset: Minute Offset:

UTC Time:

Position Related Report

Alarm Settings

IO Application

Other Settings

AT+GTTMA=gl300,+0,0,0,,,,,FFFF\$

Read Send

Step_1: Select “Time Adjustment”, after that the parameters of GTTMA show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Time Adjustment parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTTMA to GL300.

3.2.8 Set the parameters of Non Movement Detection

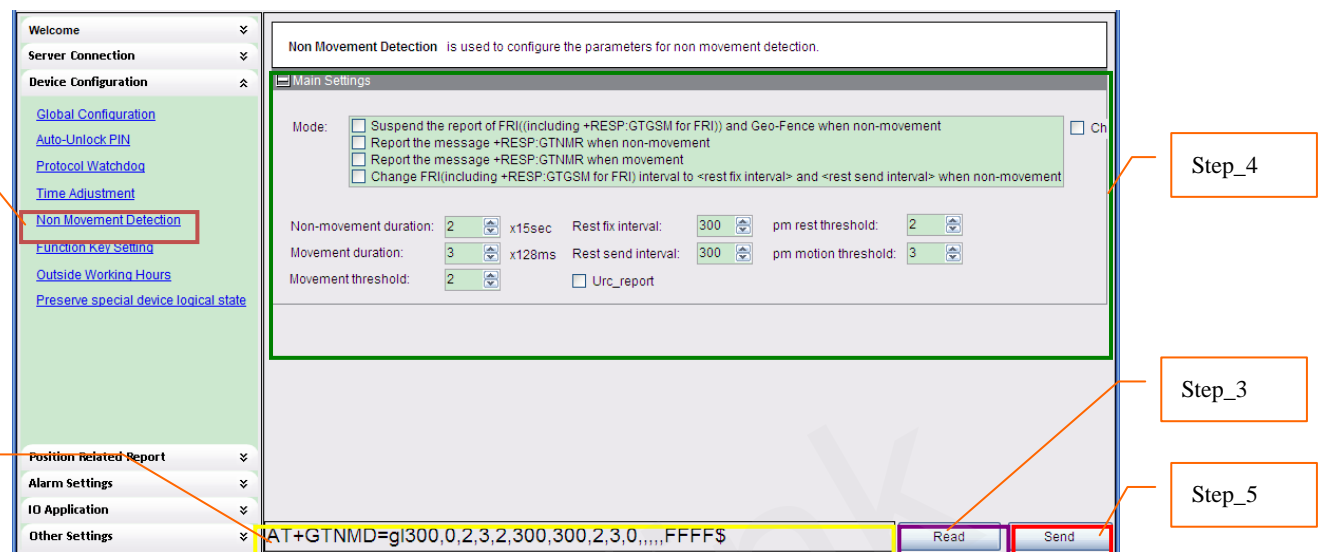

Step_1: Select “Non Movement Detection”, after that the parameters of GTNMD show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Non Movement Detection parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTNMD to GL300.

3.2.9 Set the parameters of Function Key Setting

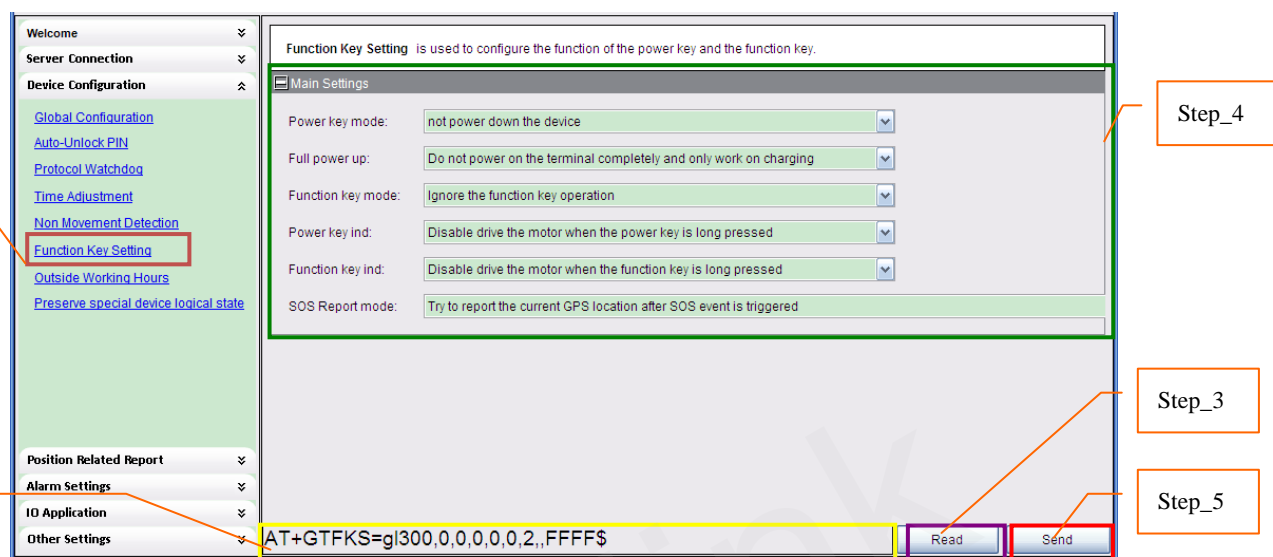

Function Key Setting is used to configure the function of the power key and the function key.

Main Settings

- Power key mode: not power down the device
- Full power up: Do not power on the terminal completely and only work on charging
- Function key mode: Ignore the function key operation
- Power key ind: Disable drive the motor when the power key is long pressed
- Function key ind: Disable drive the motor when the function key is long pressed
- SOS Report mode: Try to report the current GPS location after SOS event is triggered

Position Related Report

Alarm Settings

IO Application

Other Settings

AT+GTFKS=gl300,0,0,0,0,0,2,,FFFF\$

Read Send

Step_1: Select “Function Key Setting”, after that the parameters of GTFKS show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the function key parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTFKS to GL300.

3.2.10 Set the parameters of Outside Working Hours

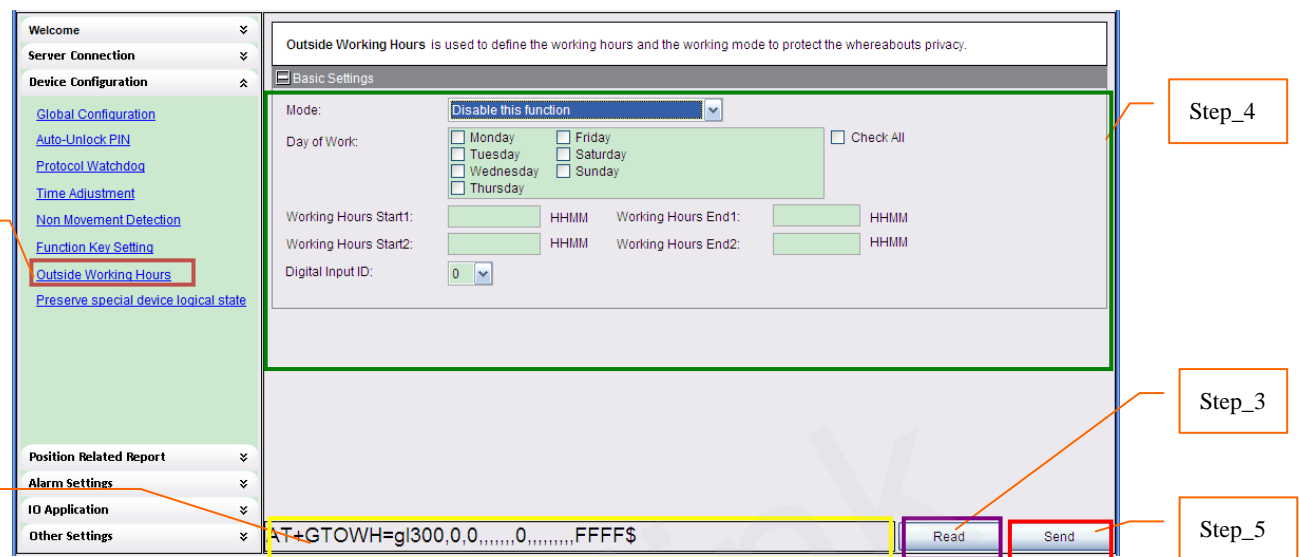

Step_1

Step_2

Step_3

Step_4

Step_5

Outside Working Hours is used to define the working hours and the working mode to protect the whereabouts privacy.

Basic Settings

Mode:

Day of Work: ☐ Monday ☐ Friday ☐ Check All
☐ Tuesday ☐ Saturday
☐ Wednesday ☐ Sunday
☐ Thursday

Working Hours Start1: HHMM Working Hours End1: HHMM
Working Hours Start2: HHMM Working Hours End2: HHMM

Digital Input ID: 0

Position Related Report

Alarm Settings

IO Application

Other Settings

AT+GTOWH=gl300,0,0,0,0,FFFF\$

Read

Send

Step_1: Select “Outside Working Hours”, after that the parameters of GTOWH show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Outside Working Hours parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTOWH to GL300.

3.2.11 Set the parameters of Preserve special device logical state

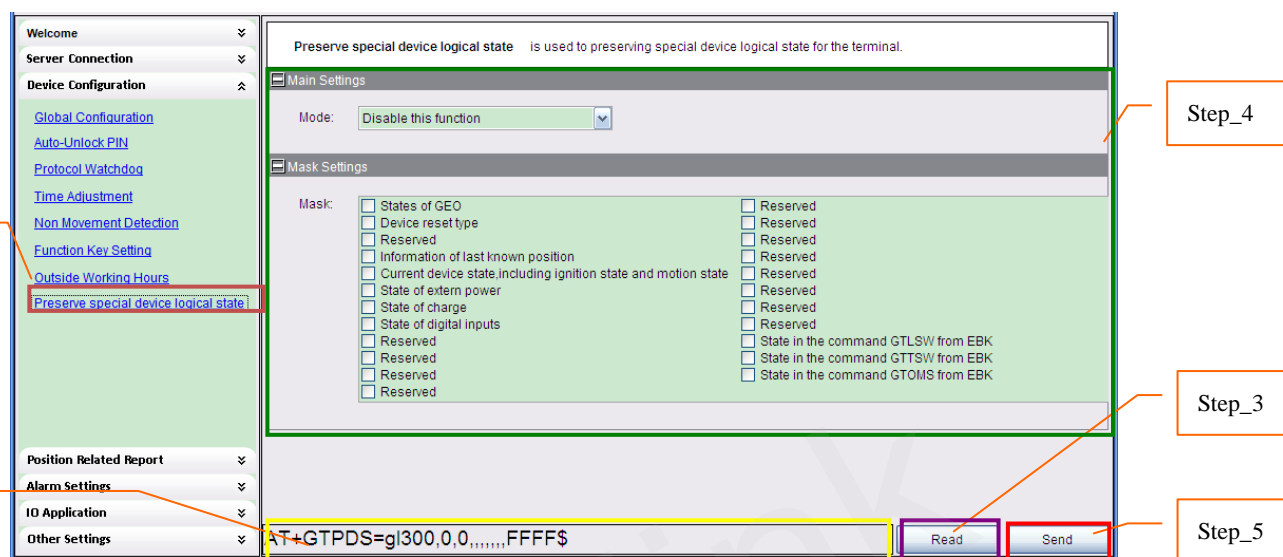

The screenshot displays the 'Preserve special device logical state' configuration page. The left sidebar contains a tree view with 'Device Configuration' expanded, showing options like 'Global Configuration', 'Auto-Unlock PIN', 'Protocol Watchdog', 'Time Adjustment', 'Non Movement Detection', 'Function Key Setting', 'Outside Working Hours', and 'Preserve special device logical state'. The main area shows 'Main Settings' with a 'Mode' dropdown set to 'Disable this function' and a 'Mask Settings' section with a list of checkboxes for various states (e.g., States of GEO, Device reset type, Information of last known position). At the bottom, a command input field shows 'AT+GTPDS=gl300,0,0,,,,,,FFFF\$' and buttons for 'Read' and 'Send'.

Step_1: Select “*Preserve special device logical state*”, after that the parameters of GTOWH show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Outside Working Hours parameters. Please refer to “*GL300 @Track Air Interface Protocol*” for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTPDS to GL300.

3.2.12 Set the parameters of Fixed Report Information

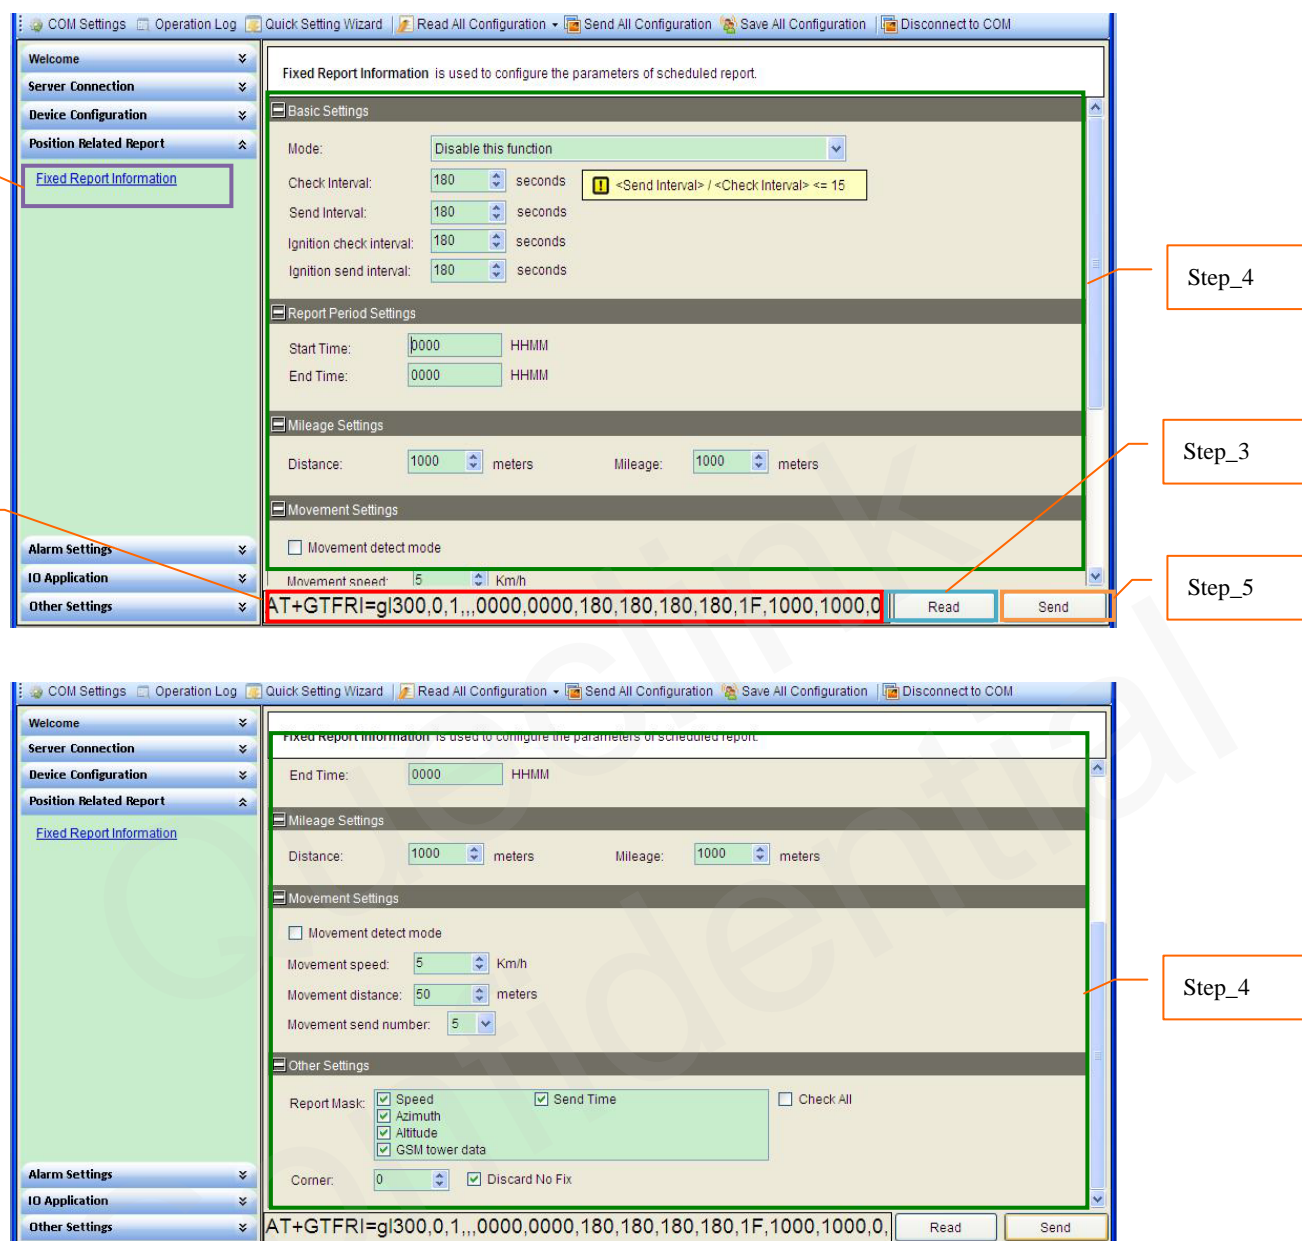

The figure consists of two screenshots of the GL300 Manage Tool interface, illustrating the steps to configure Fixed Report Information.

Step 1: Select "Fixed Report Information" in the left sidebar.

Step 2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step 3: It is recommended to read the parameters from GL300 and edit based on them.

Step 4: Set the scheduled report parameters. Please refer to "GL300 @Track Air Interface Protocol" for the meaning of each parameter.

Step 5: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_1: Select "Fixed Report Information", after that the parameters of GTFRI show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the scheduled report parameters. Please refer to "GL300 @Track Air Interface Protocol" for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTFRI to GL300.

3.2.13 Set the parameters of Geo-Fence Information

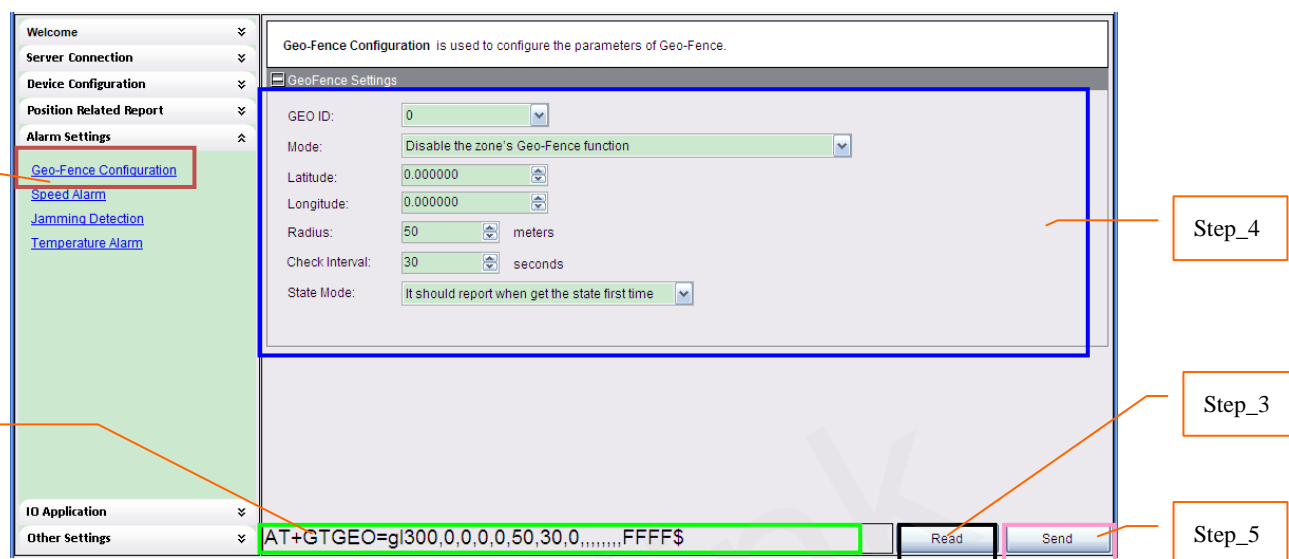

Step_1: Select “Geo-Fence Configuration”, after that the parameters of GTGEO show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the Geo-Fence parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTGEO to GL300.

3.2.14 Set the parameters of Speed Alarm

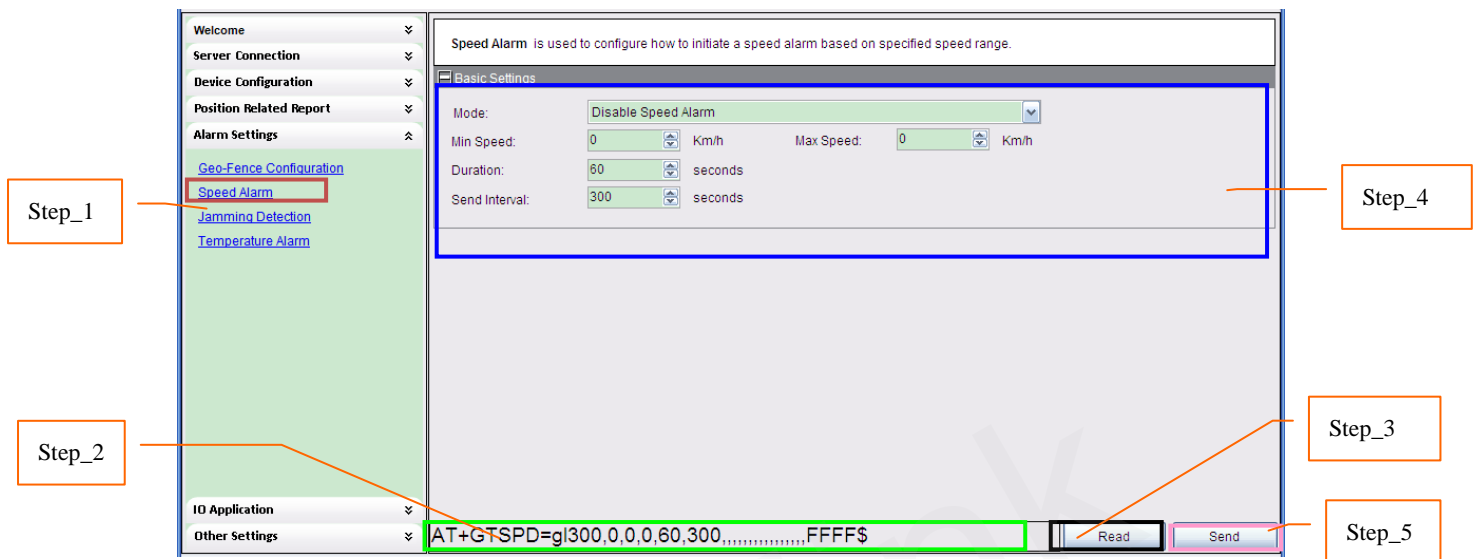

Step_1: Select “Speed Alarm”, after that the parameters of GTSPD show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the Speed Alarm parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTSPD to GL300.

3.2.15 Set the parameters of Jamming Detection

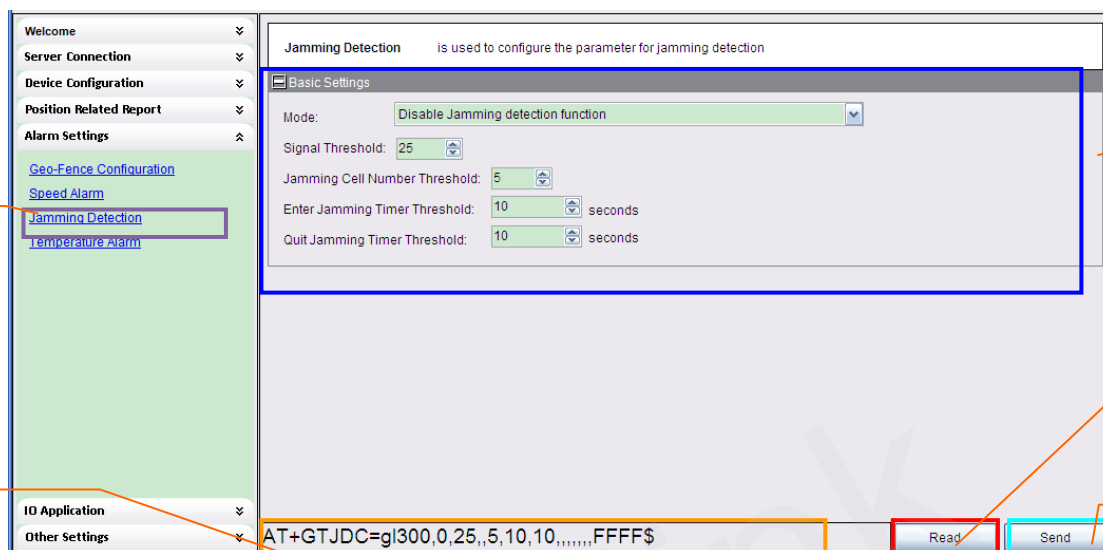

Step_1: Select “*Jamming Detection*”, after that the parameters of GTSPD show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the Speed Alarm parameters. Please refer to “*GL300 @Track Air Interface Protocol*” for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTJDC to GL300.

3.2.16 Set the parameters of Temperature Alarm

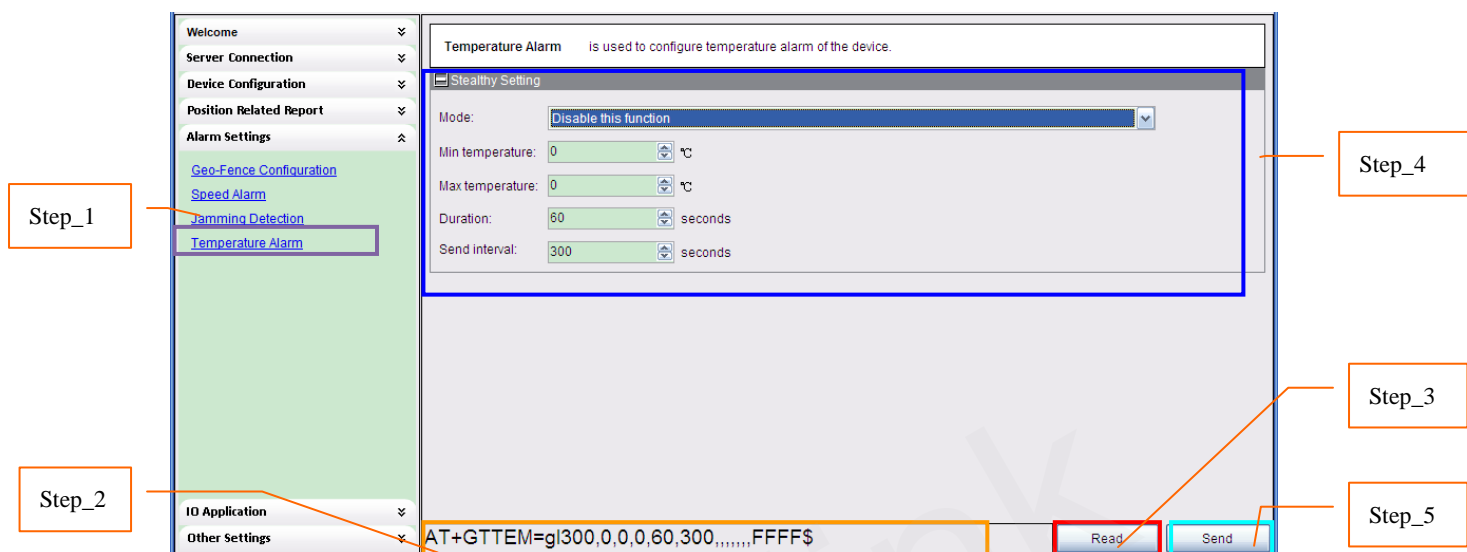

Step_1: Select “Temperature Alarm”, after that the parameters of GTSPD show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them

Step_4: Set the Speed Alarm parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTTEM to GL300.

3.2.17 Set the parameters of Digital Input Port Setting

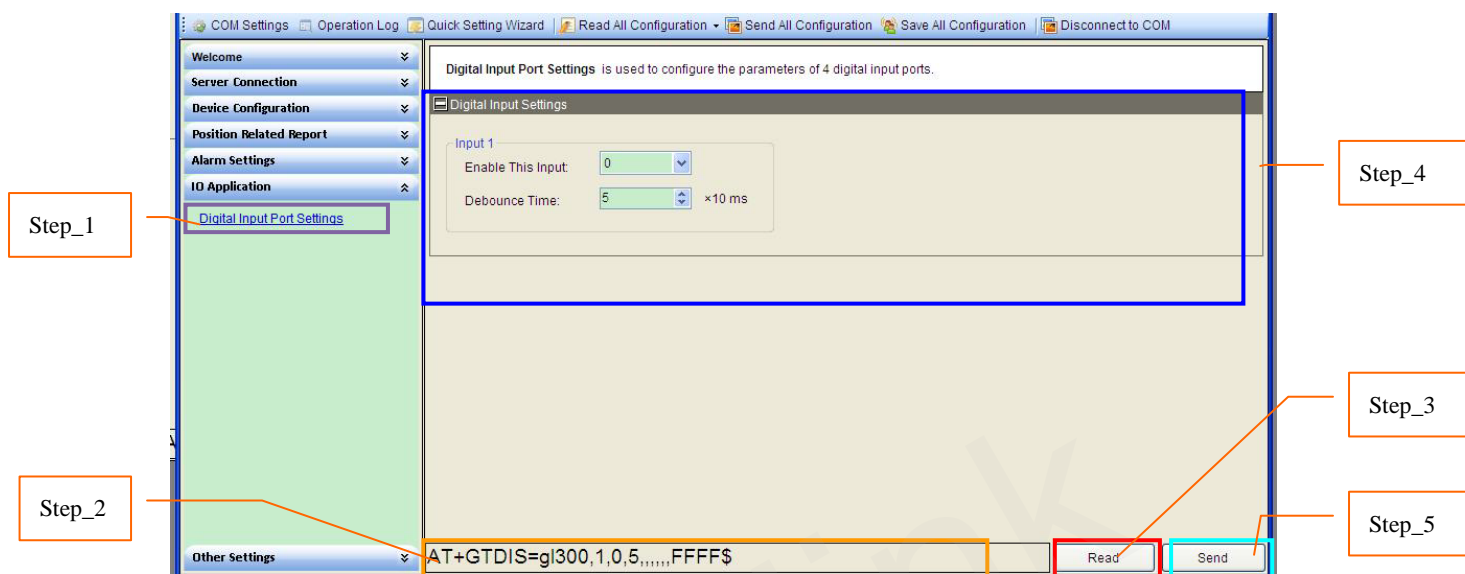

Step_1: Select “*Digital Input Port Setting*”, after that the parameters of GTDIS show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Digital Input parameters. Please refer to “*GL300 @Track Air Interface Protocol*” for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTDIS to GL300.

3.2.18 Set the parameters of Real Time Operation

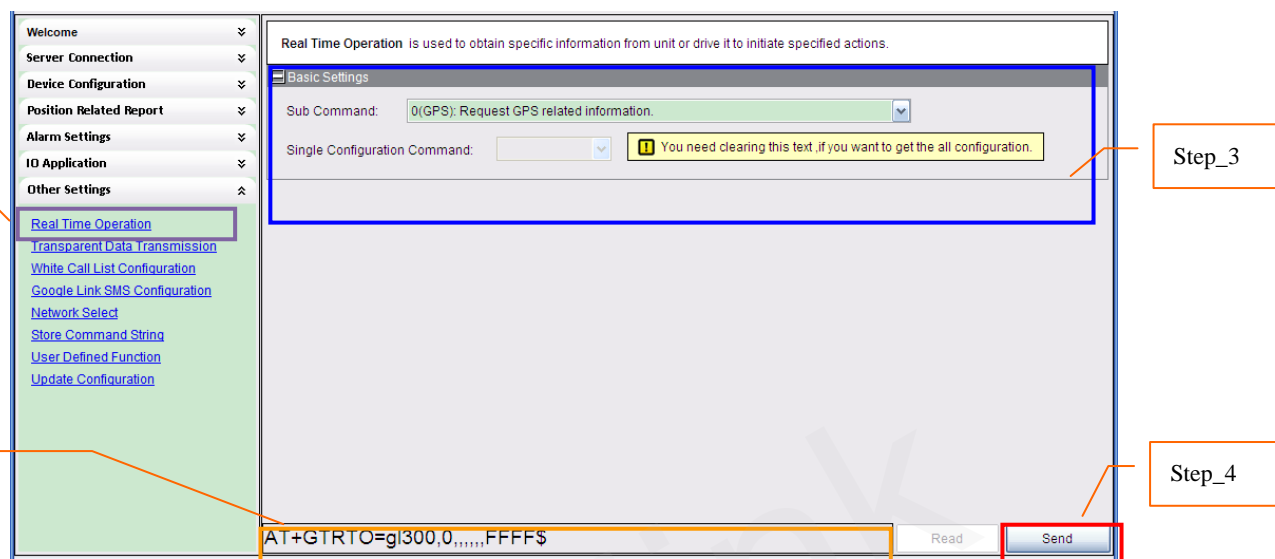


Step_1: Select “Real Time Operation”, after that the parameters of GTRTO show in Command Operation Space.

Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: Set the real time operation parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_4: Click the “Send” button; download the parameters of GTRTO to GL300.

3.2.19 Set the parameters of Transparent Data Transmission

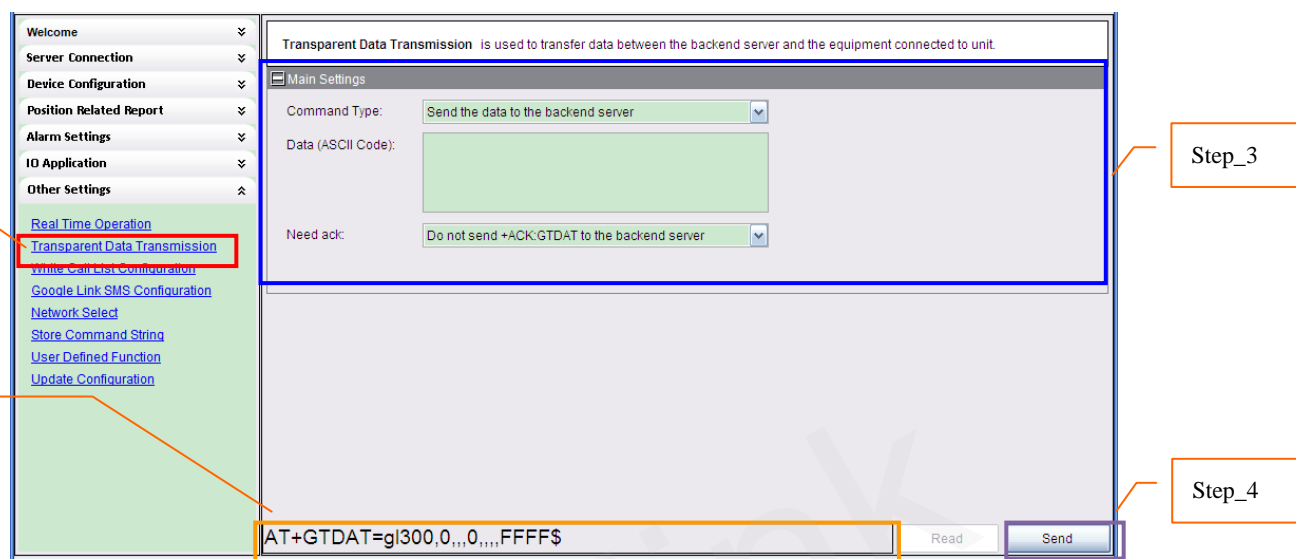


Step_1: Select “Transparent Data Transmission”, after that the parameters of GTDAT show in Command Operation Space.

Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: Set the transparent data transmission parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_4: Click the “Send” button; download the parameters of GTDAT to GL300.

3.2.20 Set the parameters of White Call List Configuration

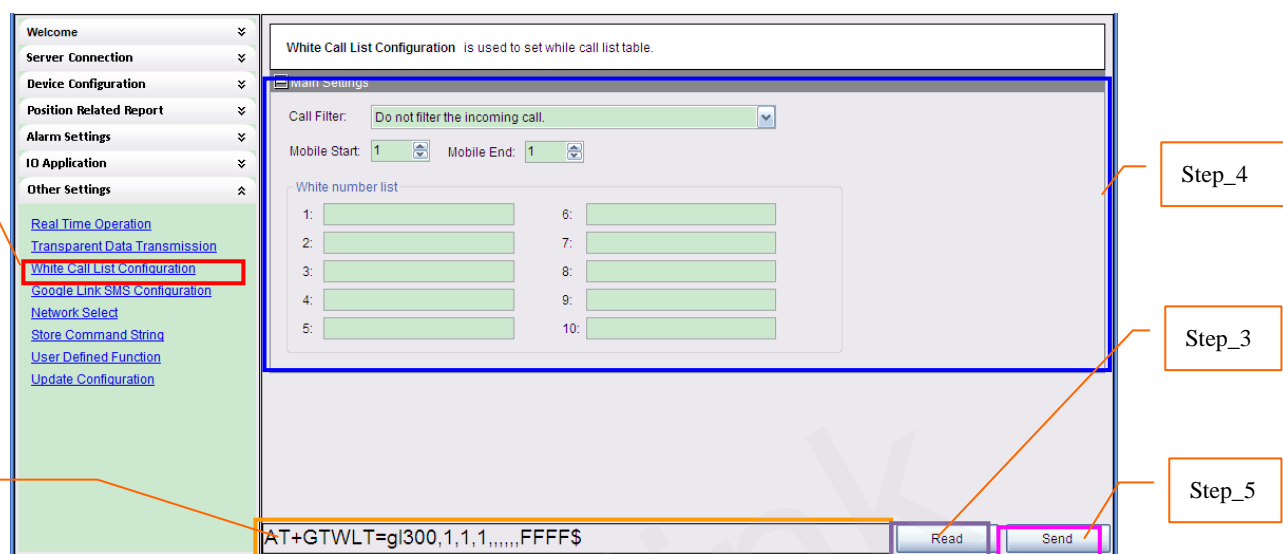

White Call List Configuration is used to set while call list table.

Call Filter:

Mobile Start: Mobile End:

White number list

1: <input type="text"/>	6: <input type="text"/>
2: <input type="text"/>	7: <input type="text"/>
3: <input type="text"/>	8: <input type="text"/>
4: <input type="text"/>	9: <input type="text"/>
5: <input type="text"/>	10: <input type="text"/>

AT+GTWLT=gl300,1,1,1,,,,,FFFF\$

Read Send

Step_1: Select “White Call List Configuration”, after that the parameters of GTWLT show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the White Call List parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTWLT to GL300.

3.2.21 Set the parameters of Google link SMS Configuration

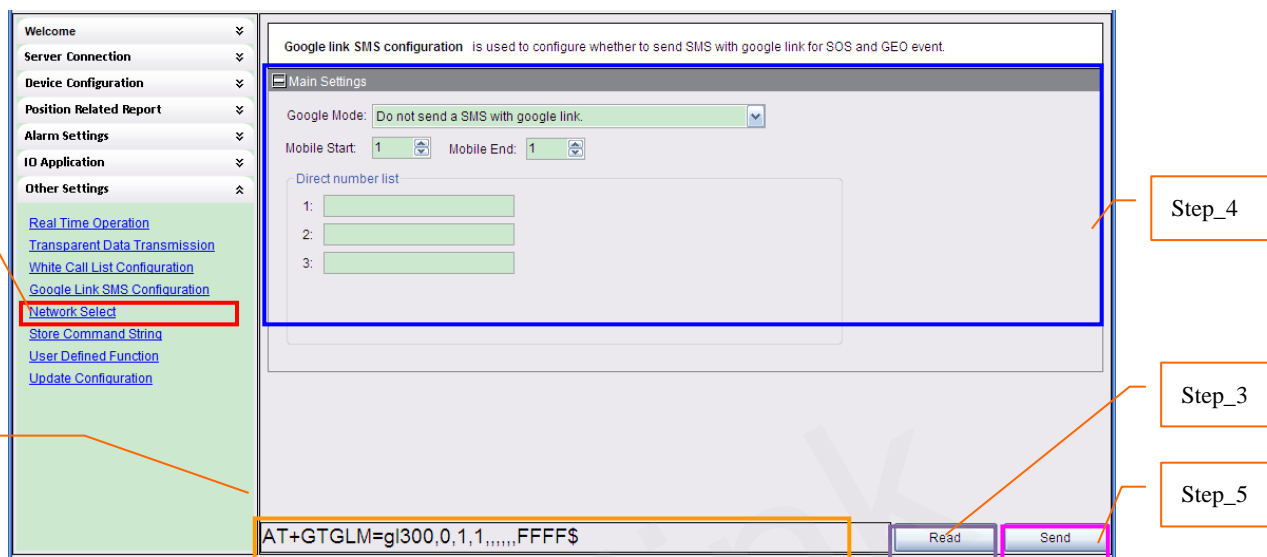

Step_1: Select “Google Link SMS Configuration”, after that the parameters of GTGLM show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Google Link SMS parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTGLM to GL300.

3.2.22 Set the parameters of Network Select

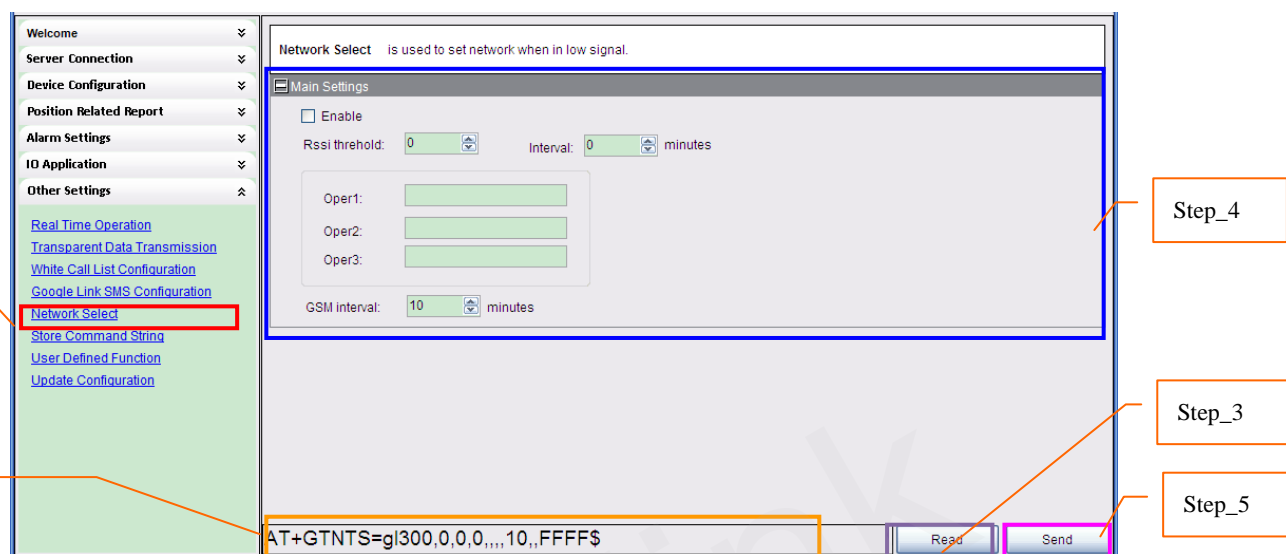

Step_1: Select “*Network Select*”, after that the parameters of GTNTS show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Network Select parameters. Please refer to “*GL300 @Track Air Interface Protocol*” for the meaning of each parameter.

Step_5: Click the “*Send*” button; download the parameters of GTNTS to GL300.

3.2.23 Set the parameters of Store Command String

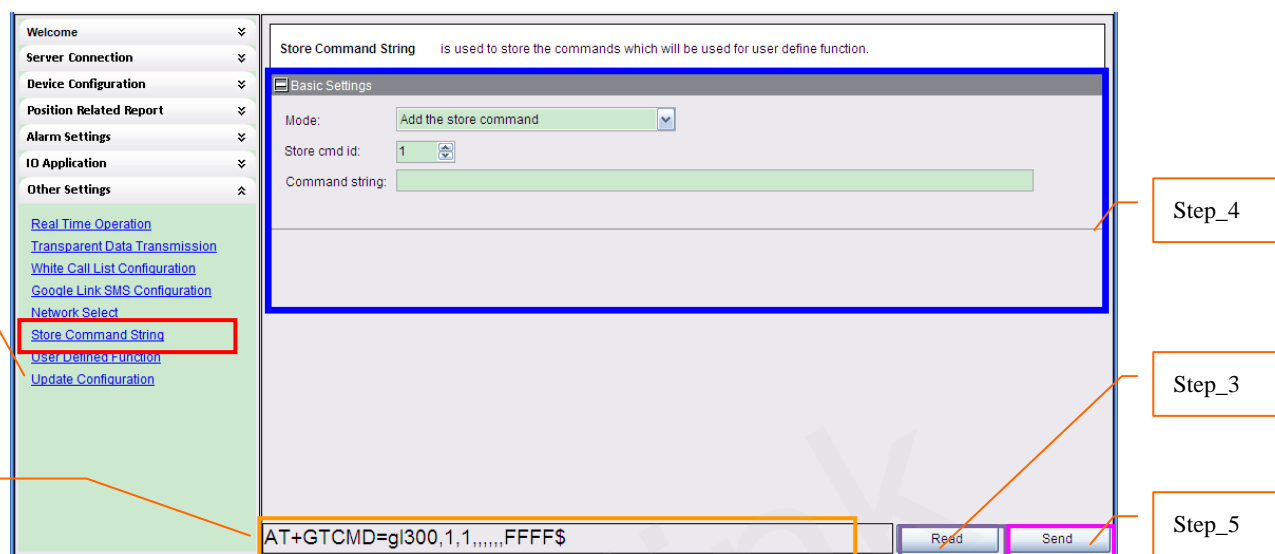

Step_1: Select “Store Command String”, after that the parameters of GTMON show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Voice Monitor parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step_5: Click the “Send” button; download the parameters of GTCMD to GL300.

3.2.24 Set the parameters of User Defined Function

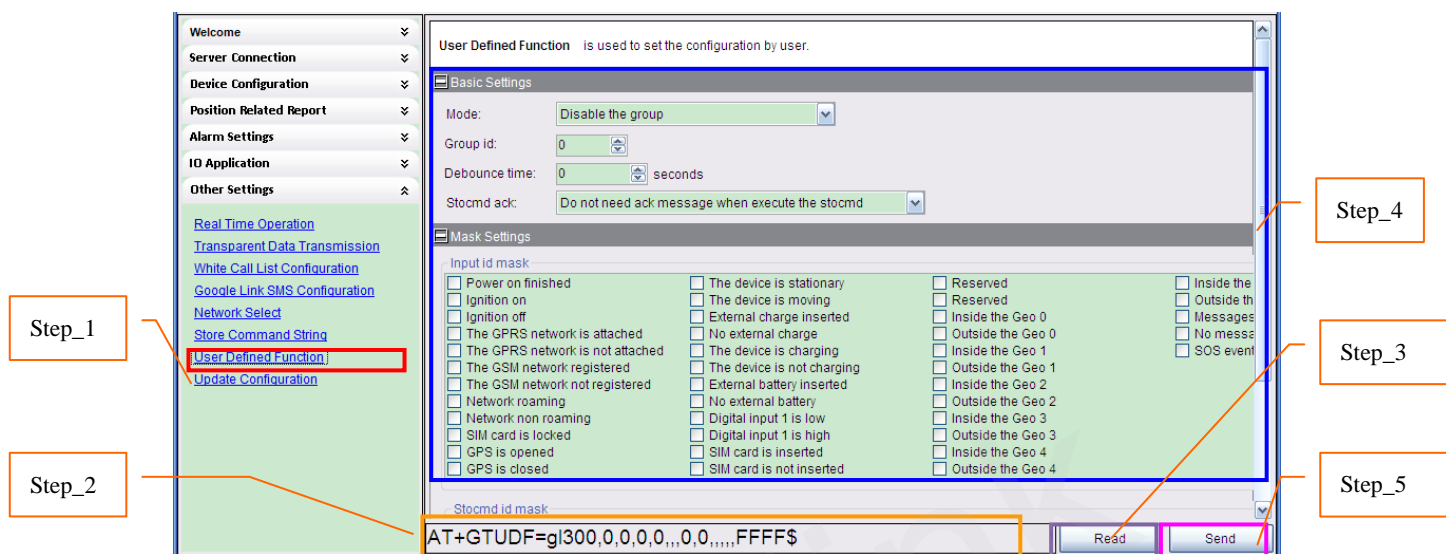

Step_1: Select “*User Defined Function*”, after that the parameters of GTTEM show in Command Operation Space.


Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Temperature Alarm parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.

Step 5: Click the “Send” button; download the parameters of GTUDF to GL300

3.2.25 Set the parameters of Update configuration over the air

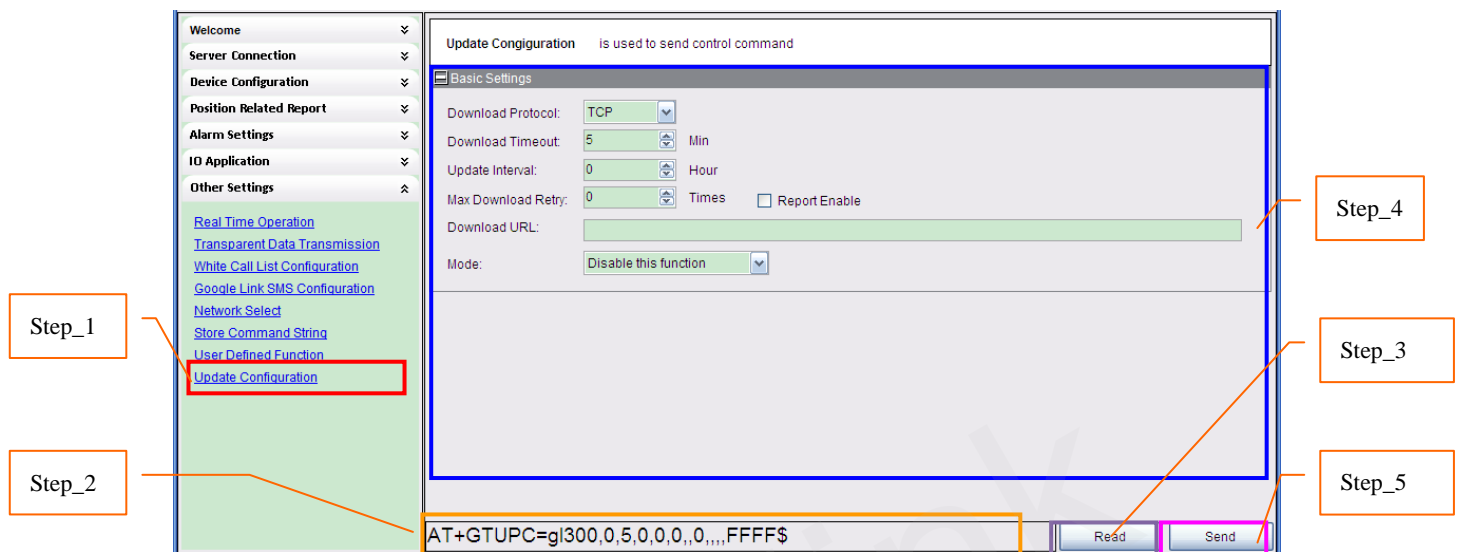

Step_1: Select “Update configuration over the air”, after that the parameters of GTTEM show in Command Operation Space.

Step_2: The command message which shall be sent to GL300 will be generated based on input and displayed here. Please note this command message can also be sent to GL300 through SMS or GPRS.

Step_3: It is recommended to read the parameters from GL300 and edit based on them.

Step_4: Set the Temperature Alarm parameters. Please refer to “GL300 @Track Air Interface Protocol” for the meaning of each parameter.


Step_5: Click the “Send” button; download the parameters of GTUPCto GL300

3.3. Read/Save All Configuration


Step_1: It is recommended to read all configurations from device before saving the configuration. Select “*Read All Configuration*”→“*Read From Device*”.




Step_2: After read successfully, click “*Save All Configuration*” in toolbar.



Step_3: Select a folder, and key in the name of configuration file, then click “*Save*” button.


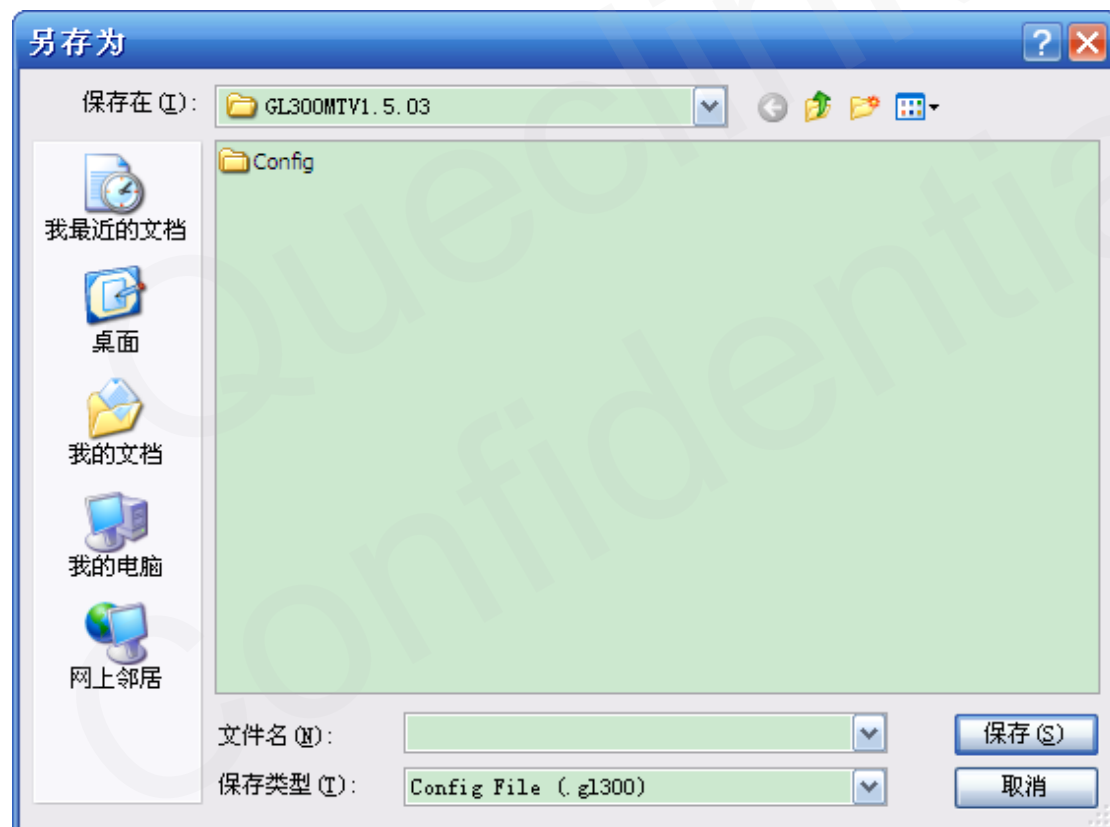


Step_4: Save successfully.

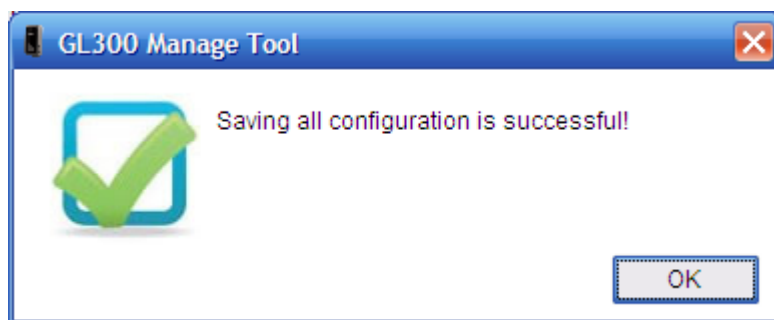

3.4. Load/Execute All Configuration

Step_1: Before execute all configurations, please load the configuration file or set all parameters in commands. To load configuration file, please select “*Read All Configuration*” → “*Load Configurations From File*”. And then select the configuration file you needed.

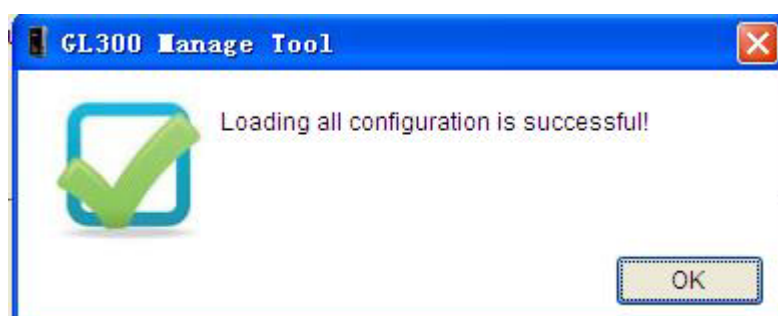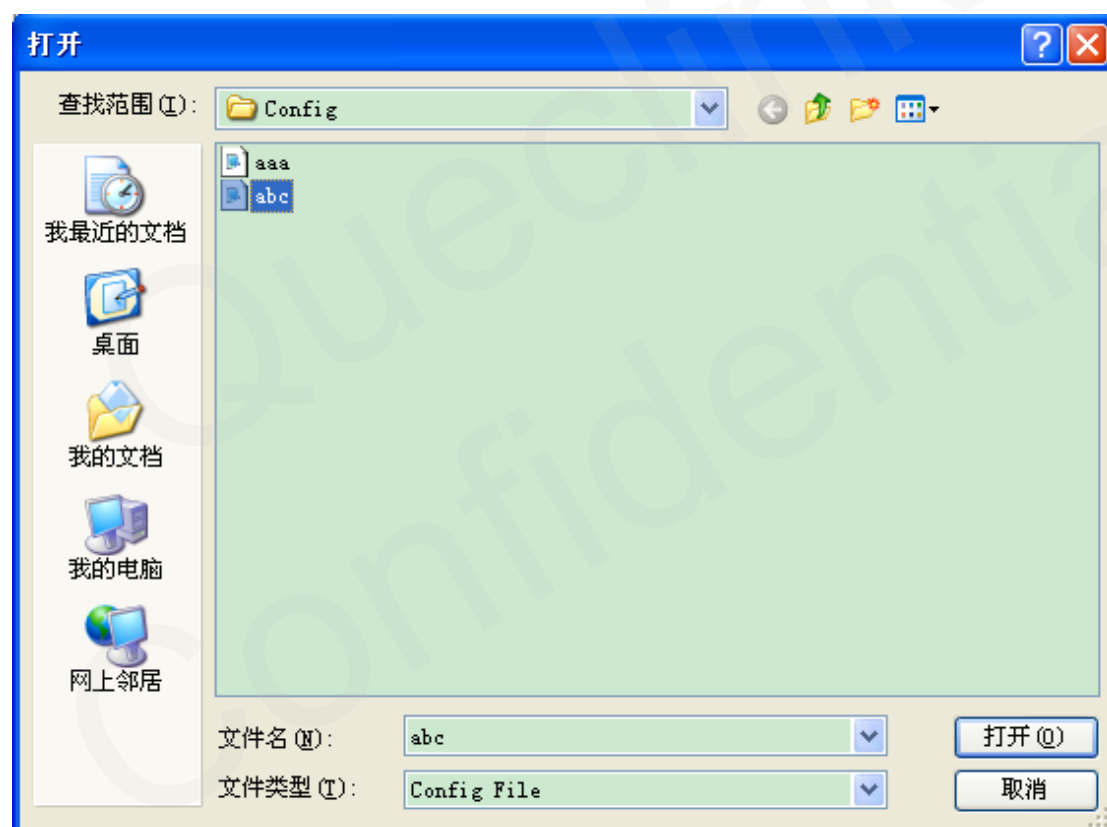

Step_2: You can set the parameters in commands base on the configuration file, and then click “*Execute All Configuration*” in toolbar.



Step_3: Manage Tool will write all commands to device.